

## Instruction for changing A.monitor transformer card.

2012-02-28JB

1. Remove the “voltage sticker” (if there is any) from the junction box.
2. Dismount the lid from the junction box on the side of the filter.
3. Disconnect the cable from A.monitor. Unlock the plug and then pull.
4. Disconnect the four cables from the motor.
5. Unscrew the four screws (one in each corner) at the transformer card and remove it.
6. Check the voltage on the small sticker at the new card.
7. Check that the spacers are mounted on transformer card.
8. Mount the new transformer card and tighten the screws.
9. Connect the four cables from the motor the same way they were connected from the start.
10. Connect the cable from the A.monitor.
11. Mount the lid on the junction box.

