

## ✚ Installations for the electrical tube for the unit for WB-6077G.



1



- Take out the number 1 (the tube).



- Lock the number 1 (the tube) with the hydraulic hose adapter.

## ✚ Installations for the electrical tube for the unit for WB-6077G.



2



- Take out the number 2 (the tube connect the elbow, 90 degree, quick coupler and the bushing).



- Lock the number 2 (the tube connect the elbow, 90 degree, quick coupler and the bushing) with the hydraulic hose adapter.


## ✚ Installations for the electrical tube for the unit for WB-6077G.



3



- Take out the number 3 (the tube).

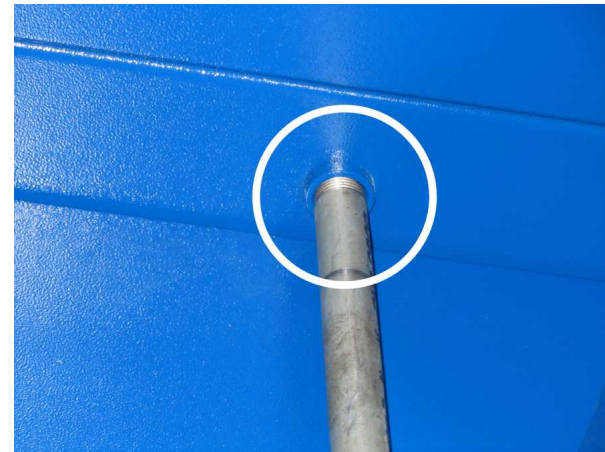

- Lock the number 3 (the tube) with the hydraulic hose adapter.

## ✚ Installations for the electrical tube for the unit for WB-6077G.



4



- Take out the number 4 (the tube).



- Lock the number 4 (the tube) with the hydraulic hose adapter.

## ✚ Installations for the electrical tube for the unit for WB-6077G.



5




- Take out the number 5 (the light and the tube connect the light switch and 2-plugs sockets: for overhead light).



- Lock the number 5 (the light and the tube connect the light switch and 2-plugs sockets: for overhead light) with the hydraulic hose adapter.

## ⚡ Cable connections for electrical junction box for WB-6077G.

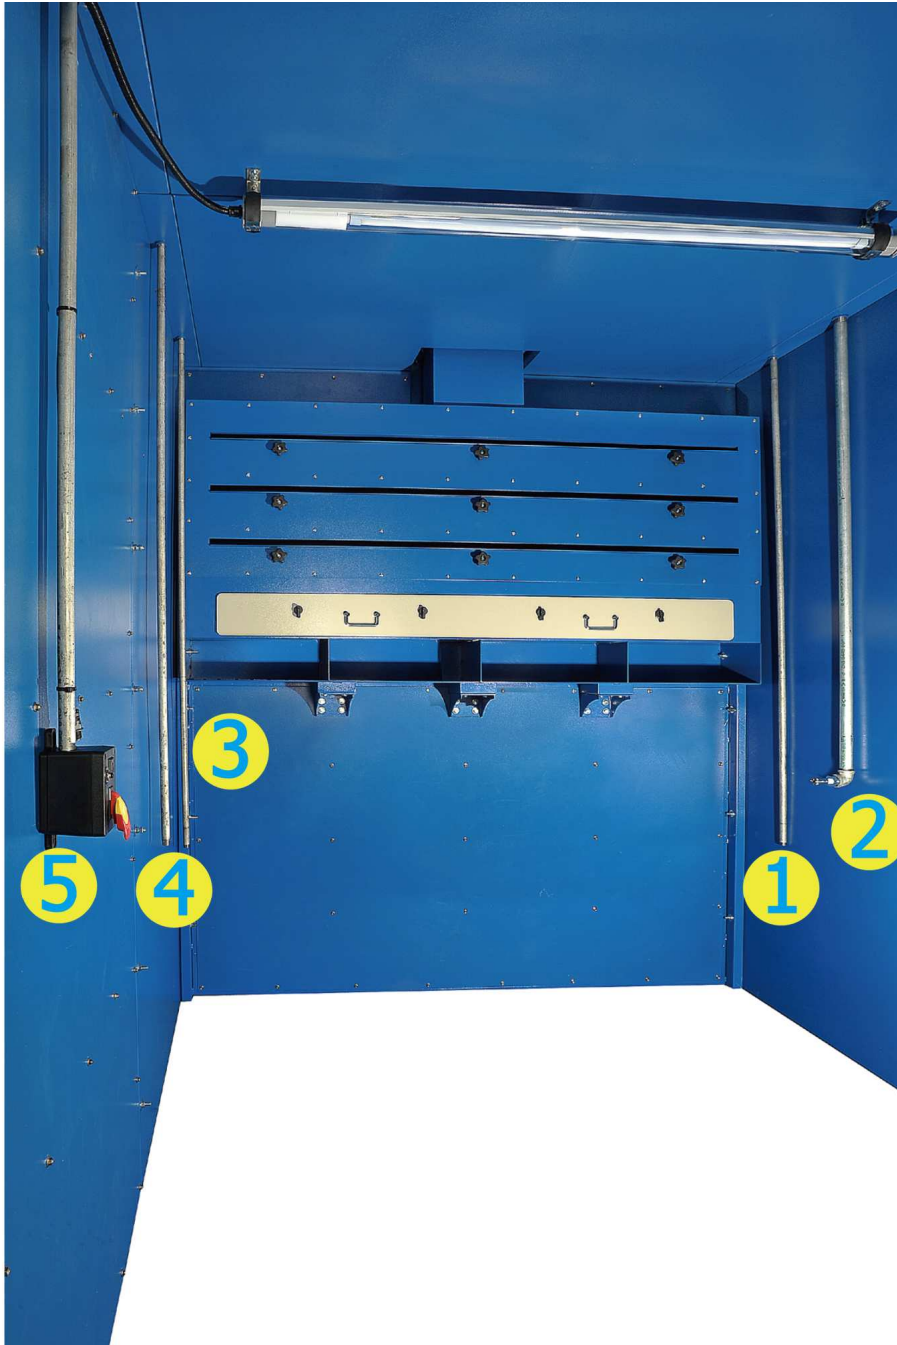

- Then reach the cable through the tube into the electrical junction box.
- Connect the cables with the terminal blocks for the electrical junction box.
- Link this set to local main power supply.



- Lock the cover of the electrical junction box.

# Wiring for the light switch and 2-plugs sockets: for overhead lights for WB-6077G.

