


This is how the tech manual shows the roll media loaded and how it feeds and is taken up.

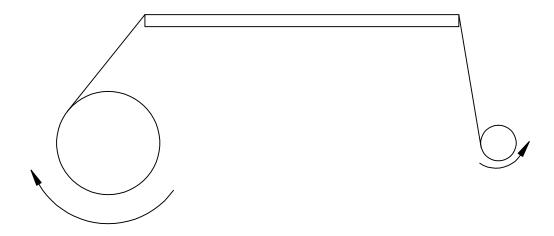

This is how the unit operates in the field. Is this a problem?

The steel rod that is on the collection side will not stay in place with this operation. Do we need to change the rotation direction of the collection motor and if so, how do we change the rotation.

