

cable connections of the light switch to electrical junction box for WB-P-5x5CL-R (right booth when facing the unit)



- ◆ At first open the cover of the electrical junction box.



- ◆ Then reach the cable through the tube into the electrical junction box.
- ◆ Connect the cables with the terminal blocks for the electrical junction box.
- ◆ Link this set to local main power supply.



- ◆ Lock the cover of the electrical junction box.

cable connections of light switch to overhead lights for WB-P-5x5CL-R (right booth when facing the unit)



- ◆ At first take out the cable of light from the steel adapter box.



- ◆ Then reach the cable of the light switch through the tube into the steel adapter box



- ◆ Connections of two cables.





- ◆ Lock the cover of the steel adapter box.

installations for electrical junction box for WB-P-5x5CL-L (left booth when facing the unit)



- ◆ Take out the electrical junction box which is packed with the UL control box.

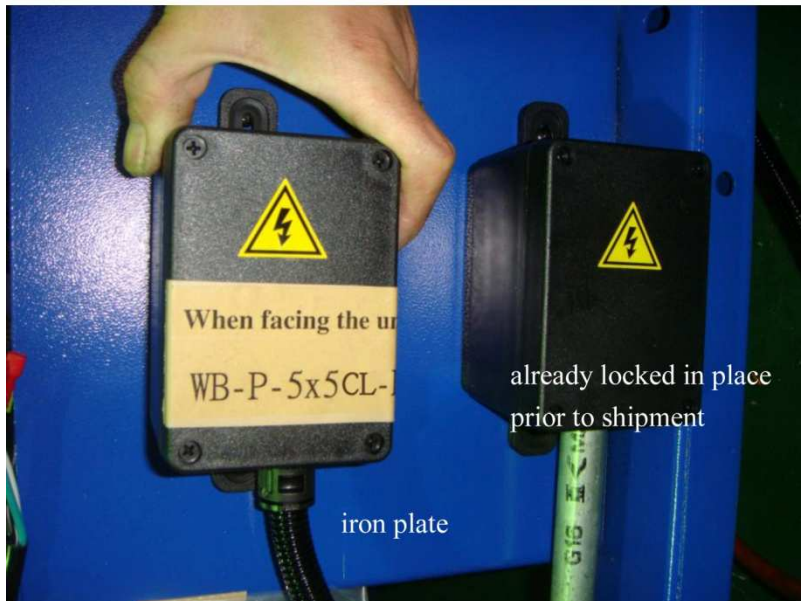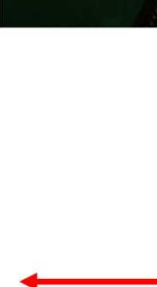

- ◆ Open the cover of the electrical junction box. Connect to local main power supply. Fasten the cover of the electrical junction box.
- ◆ Then the electrical junction box should detour the back of WB-P-5x5CL-L main set when facing the unit.
- ◆ Lock the electrical junction box on the iron plate next to the other electrical junction box which is already locked on the plate.

cable connections for electrical junction box to light switch and 2-plugs sockets for WB-P-5x5CL-L (left booth when facing the unit)




- ◆ Put out the corrugated plastic tubing from plastic connection.




- ◆ Lock the cover of the light switch and 2-plugs sockets.
- ◆ Put the corrugated plastic tubing into the plastic connection.

- ◆ Open the cover of the light switch and 2-plugs sockets: for overhead lights.
- ◆ Then reach the cable through the tube into the light switch and 2-plugs sockets through the tube.
- ◆ Connect the white cable with three white cables.
- ◆ Connect the black cable with three black cables.
- ◆ Using the screw on wire connector to lock up these four white cables and four black cables.
- ◆ Connect the grounding cable with the terminal blocks.

wirings for light switch and 2-plugs sockets for WB-P-5x5MA-L (left booth when facing the unit) and WB-P-5x5CL-R (right booth when facing the unit)

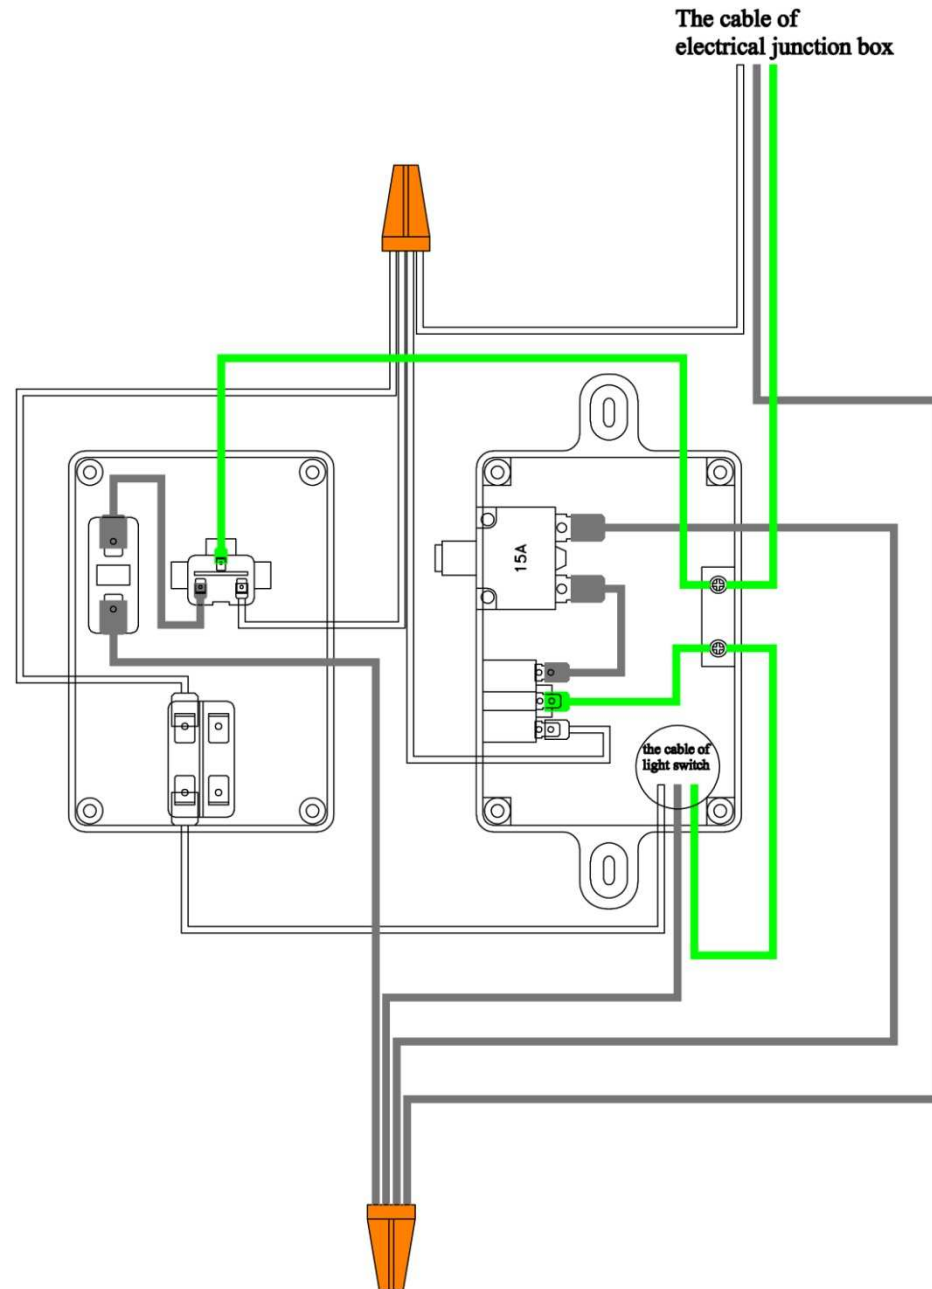

cable connections of light switch to overhead lights for WB-P-5x5CL-L (left booth when facing the unit)

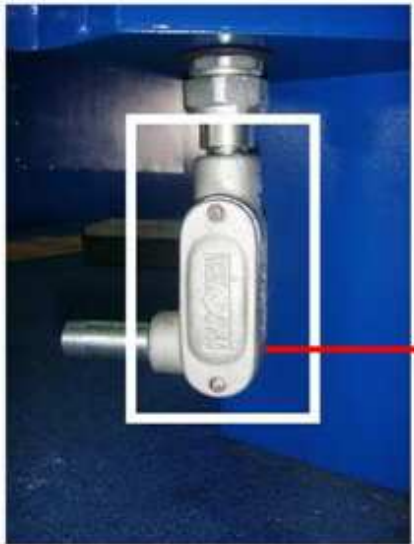

- ◆ At first take out the cable of light from the steel adapter box.



- ◆ Then reach the cable of the light switch through the tube into the steel adapter box



- ◆ Connections of two cables.



- ◆ Lock the cover of the steel adapter box.