




# Main Electrical Box Wiring For SDC-5-4

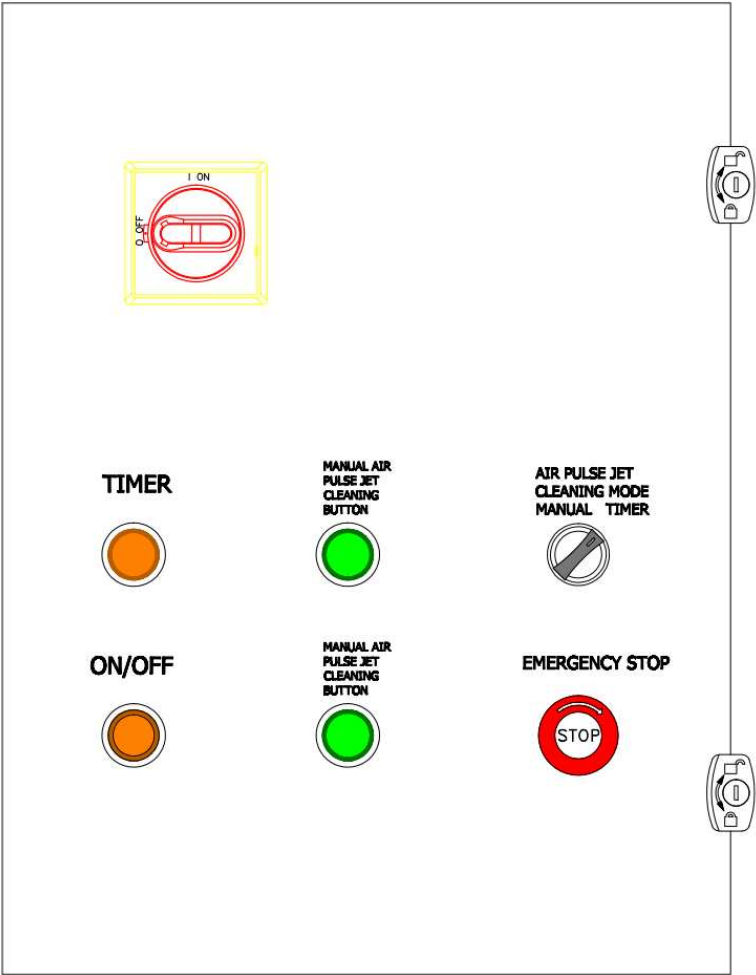

# Main Electrical Box Wiring For SDC-5-4

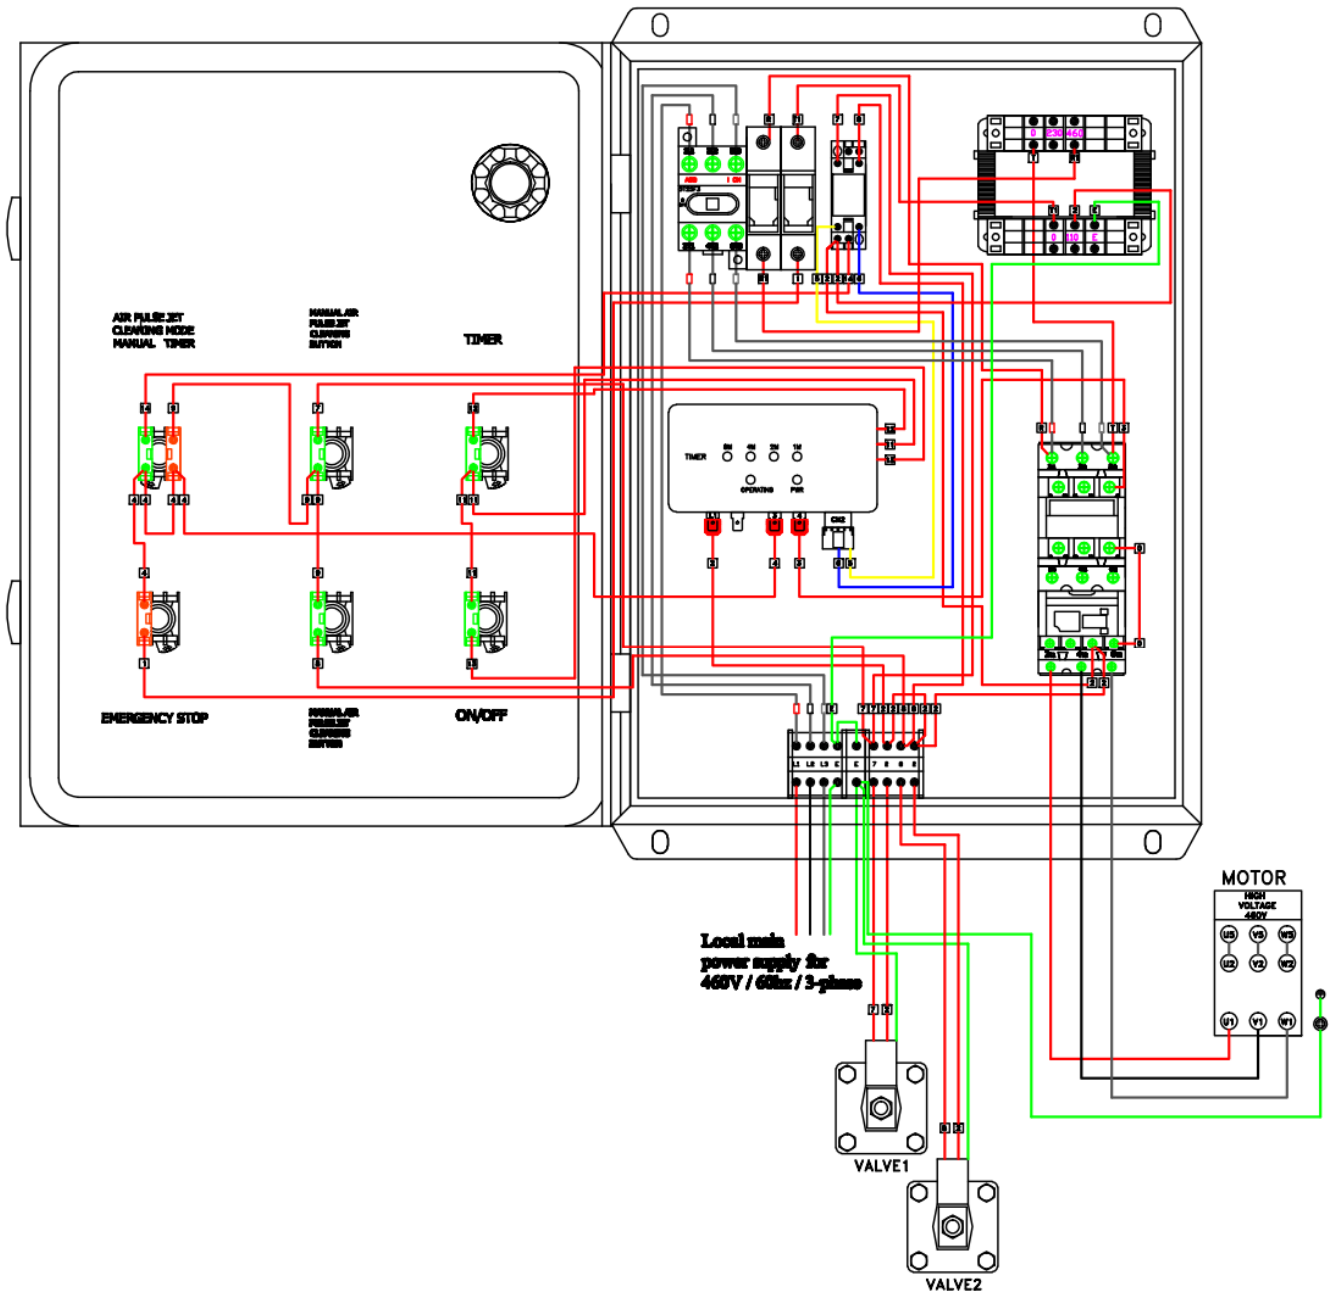

# Main Electrical Box Wiring For SDC-5-4

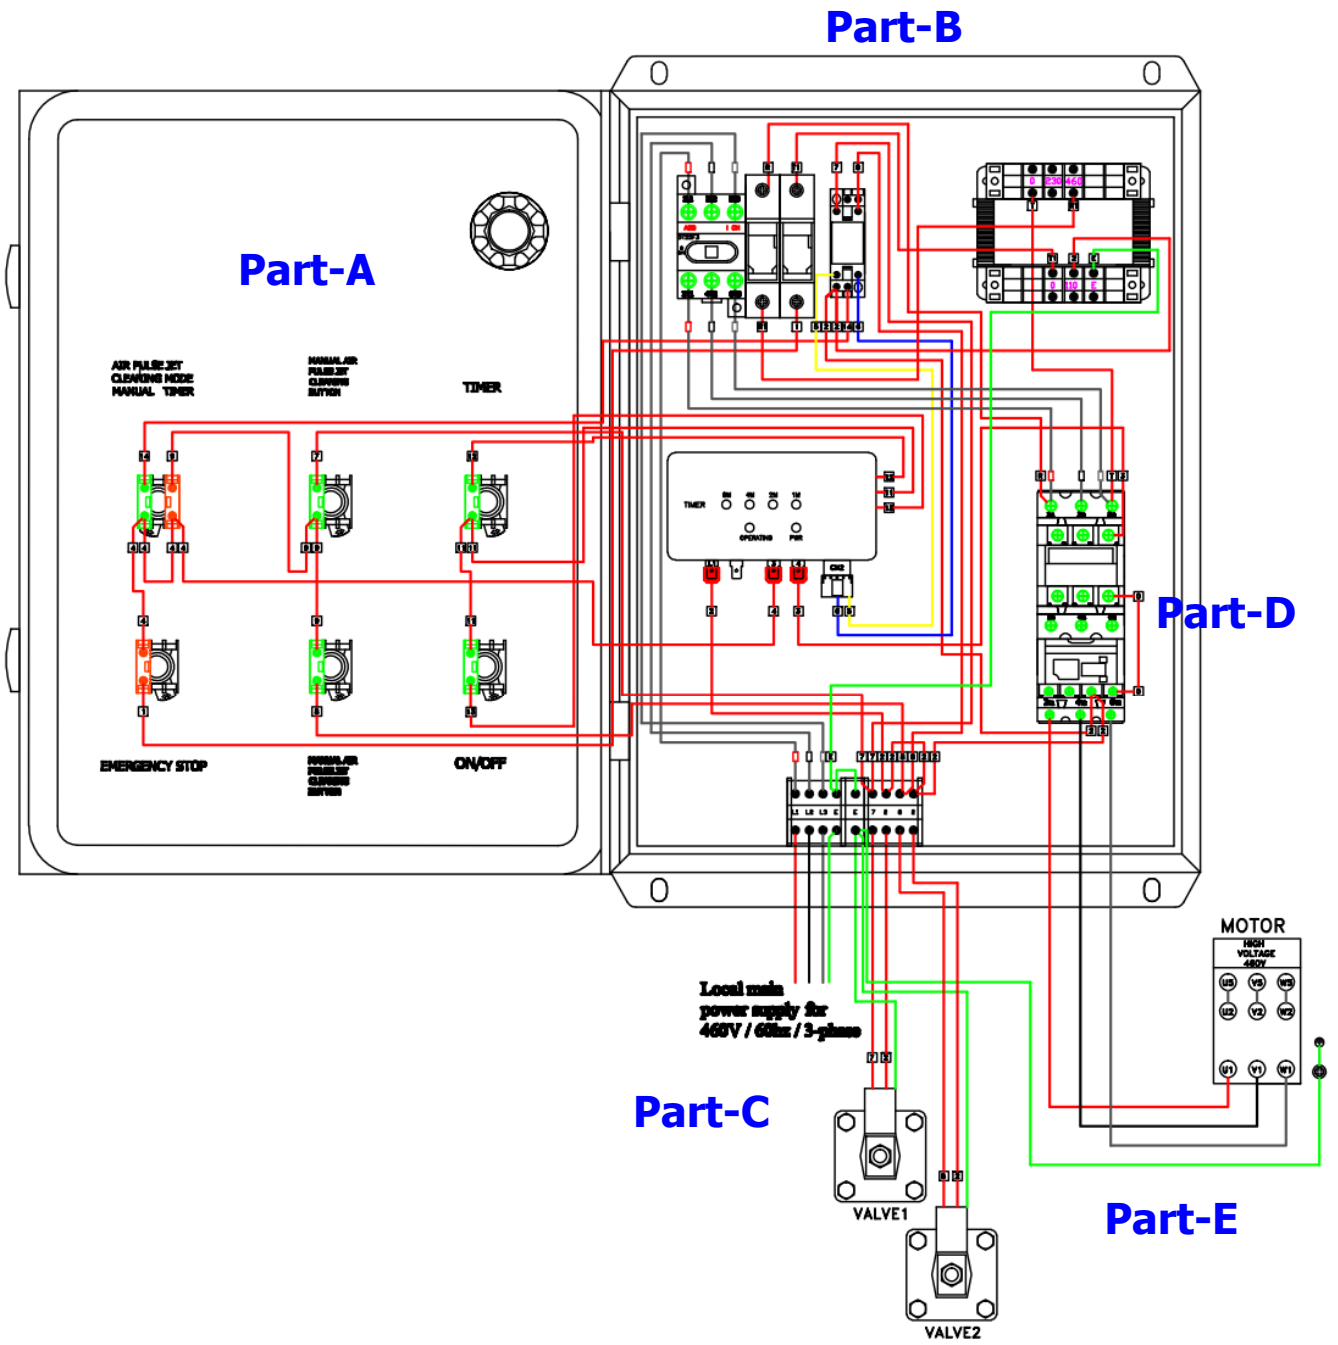


# Main Electrical Box Components for SDC-5-4

## Part-A

AIR PULSE JET  
CLEANING MODE  
MANUAL TIMER

MANUAL AIR  
PULSE JET  
CLEANING  
BUTTON

TIMER

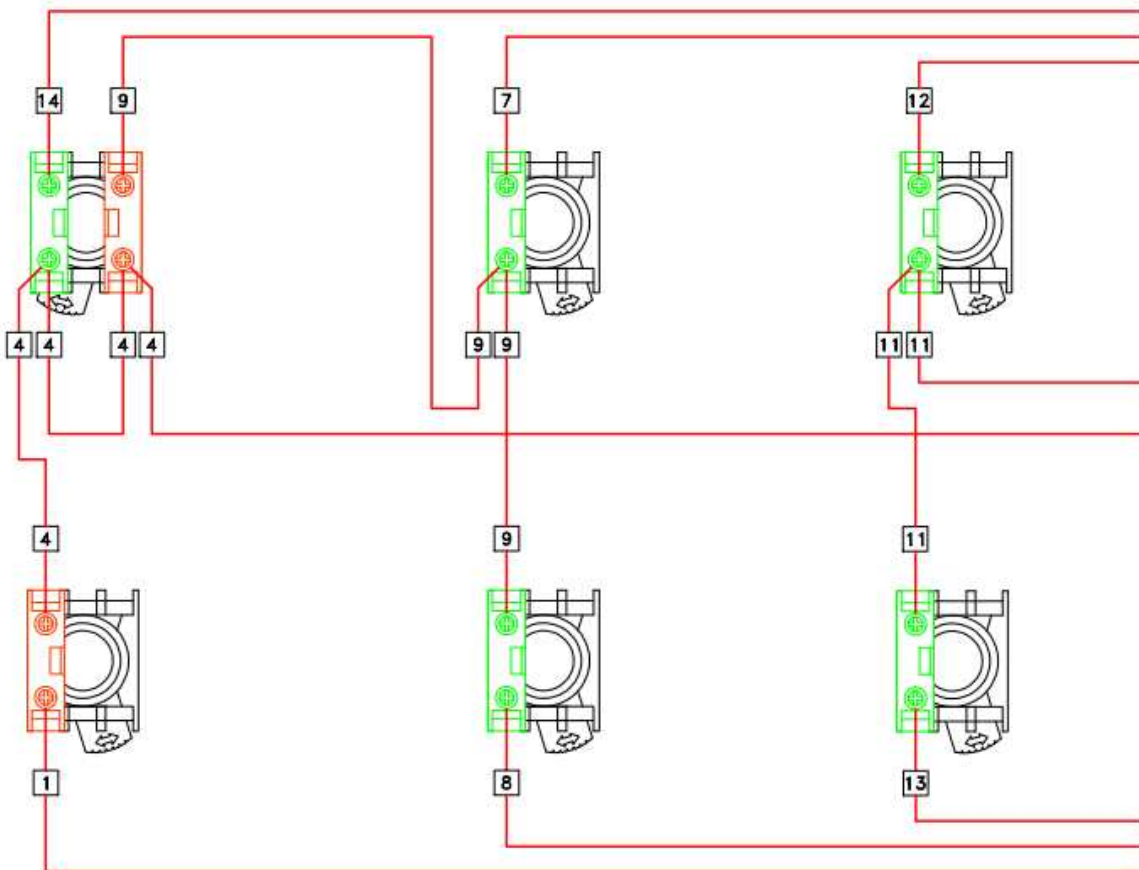


EMERGENCY STOP

MANUAL AIR  
PULSE JET  
CLEANING  
BUTTON

ON/OFF


# Main Electrical Box Components for SDC-5-4

## Part-B-1 IC Board

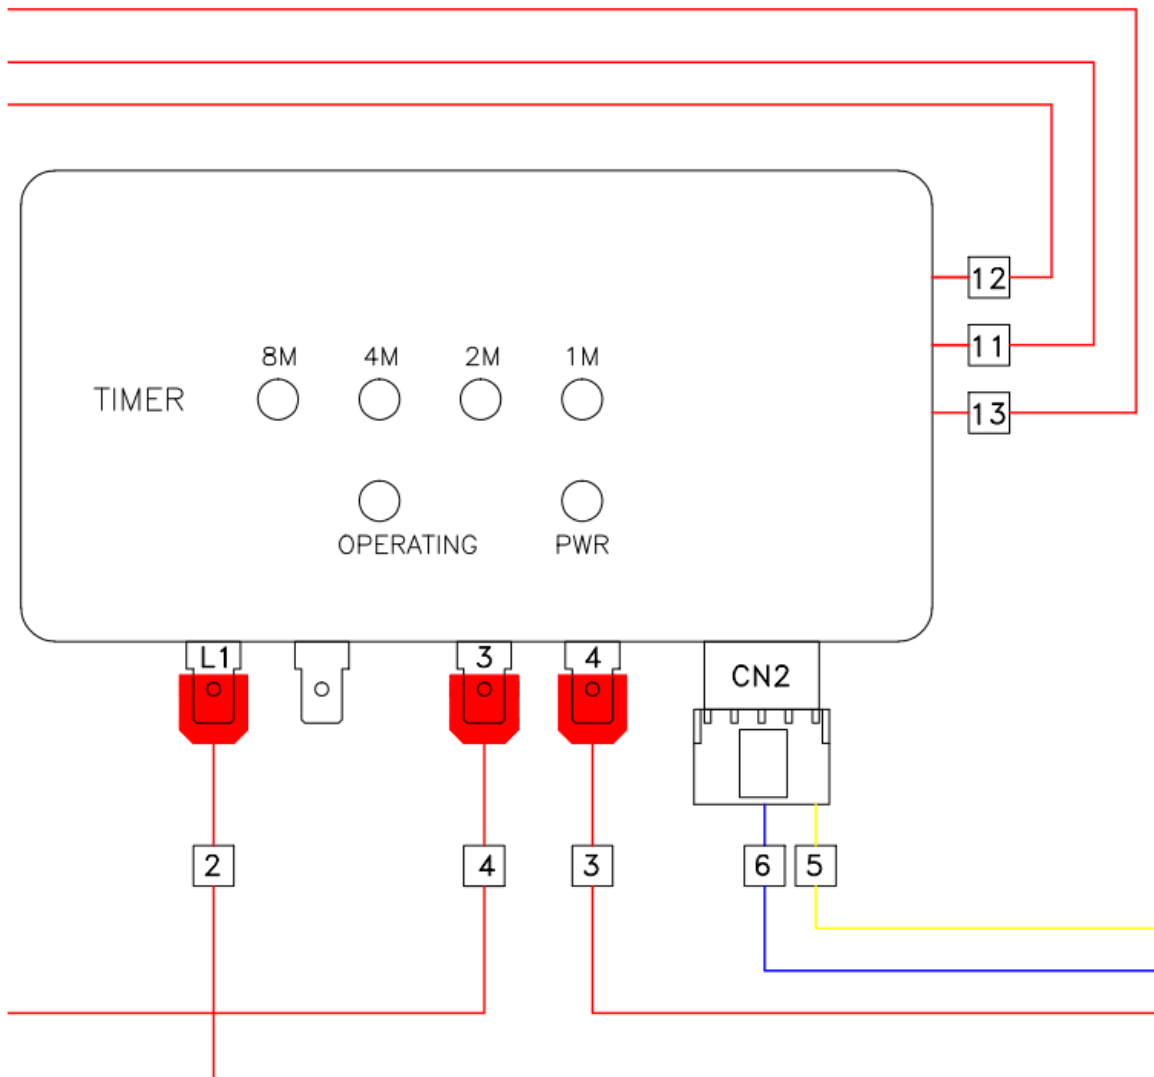

# Main Electrical Box Components for SDC-5-4



## Part-B-1

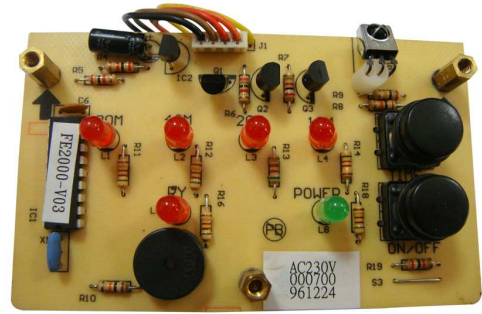

◆ IC Board (Front)




◆ IC Board (Back)

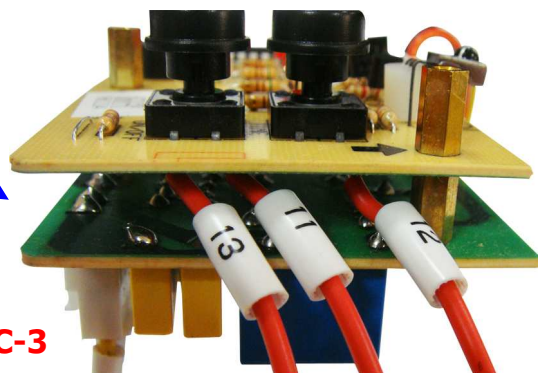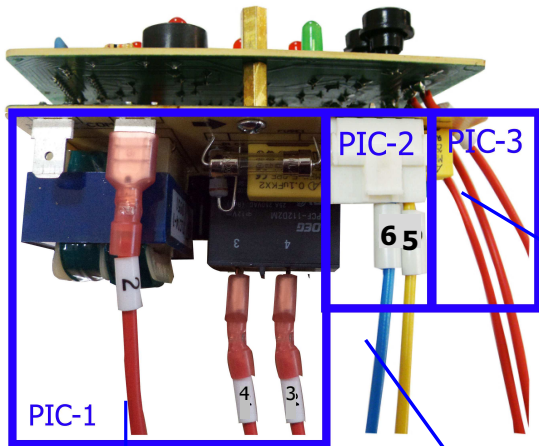

PIC-3


- ◆ 11 : Common Point
- ◆ 12 : TIMER.
- ◆ 13 : ON/OFF

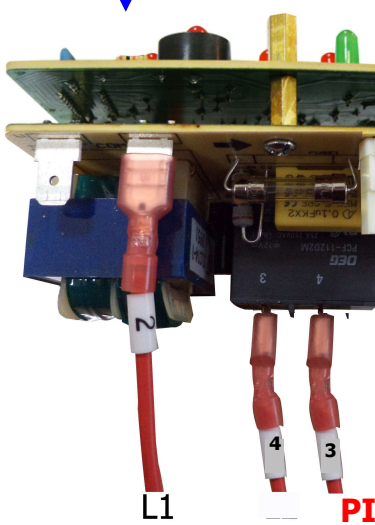

L1

PIC-1

- ◆ L1/L2 : The main power.

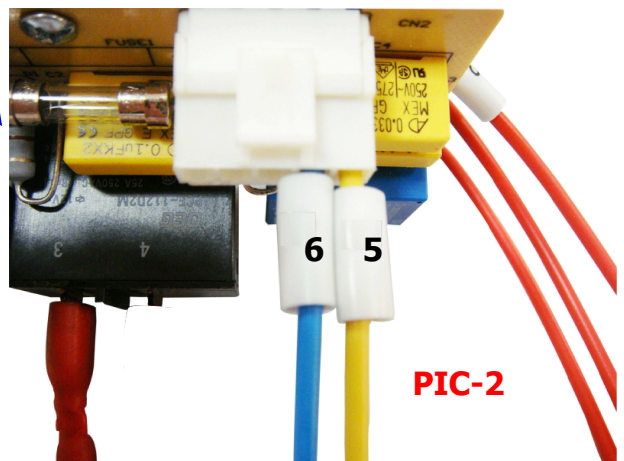


PIC-2

- ◆ Air pulse jet system.

# Main Electrical Box Components for SDC-5-4

**Part-B-2 :** Panel disconnect switch.  
Fuse bus.  
Relay.

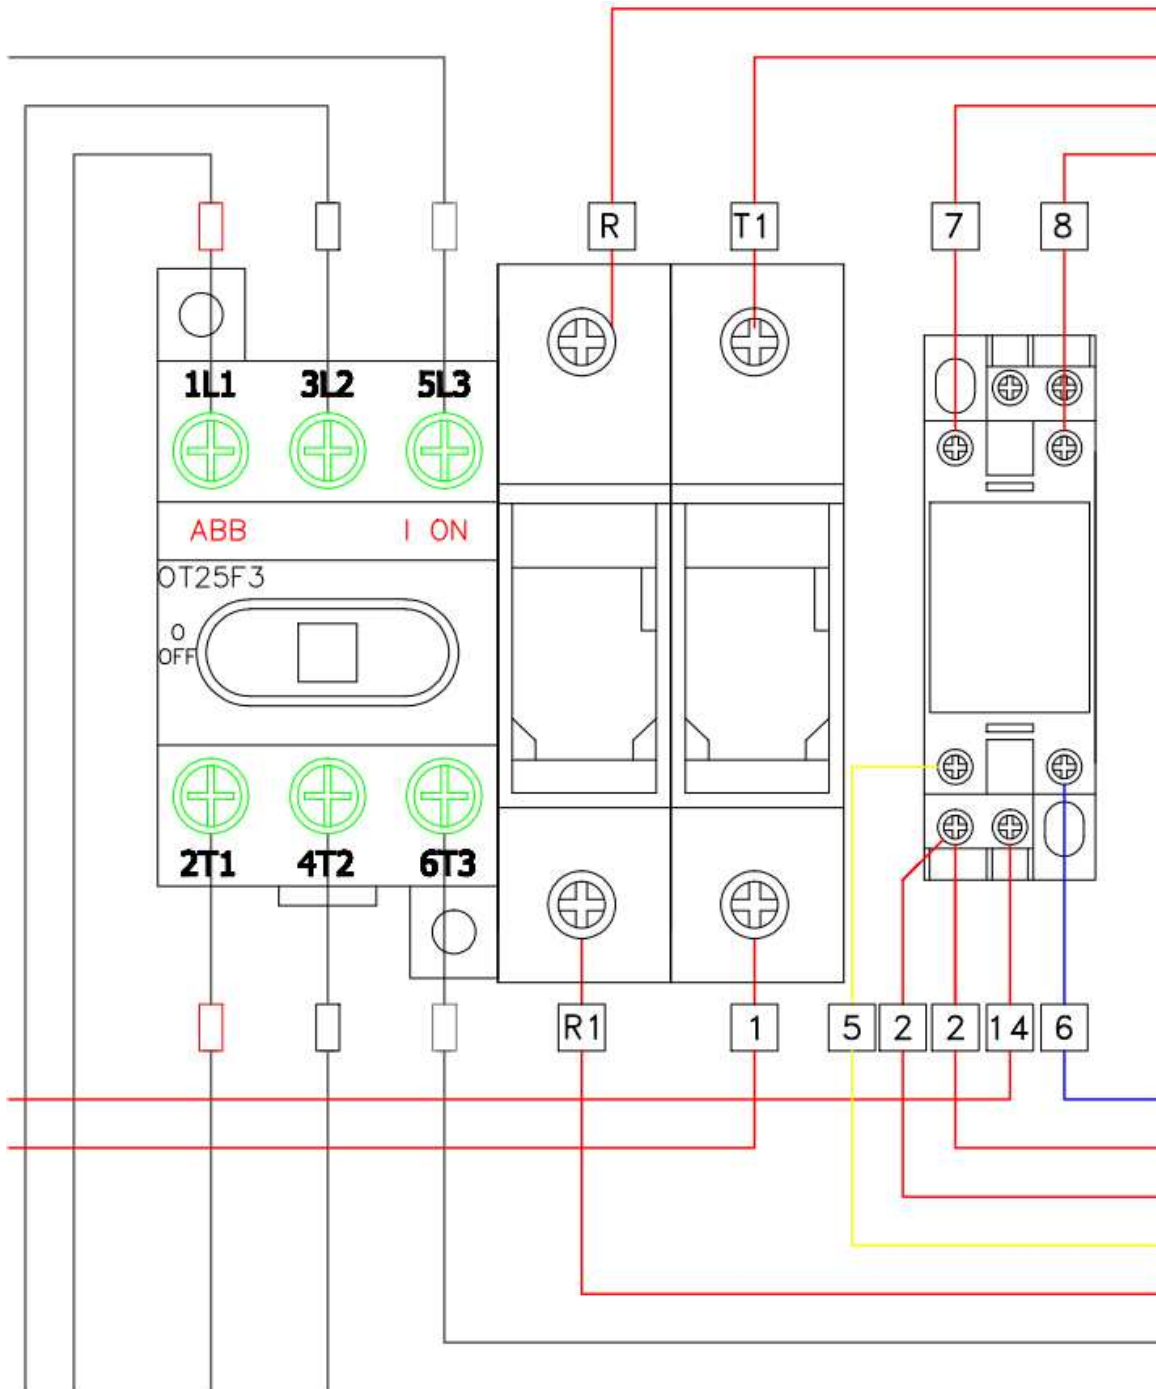




# Main Electrical Box Components for SDC-5-4



◆ Panel disconnect switch.



◆ Fuse bus.

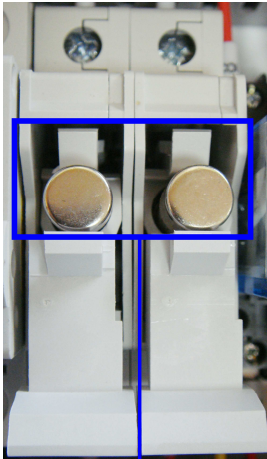


◆ Relay.





# Main Electrical Box Components for SDC-5-4


## Part-B-3 : Transformer

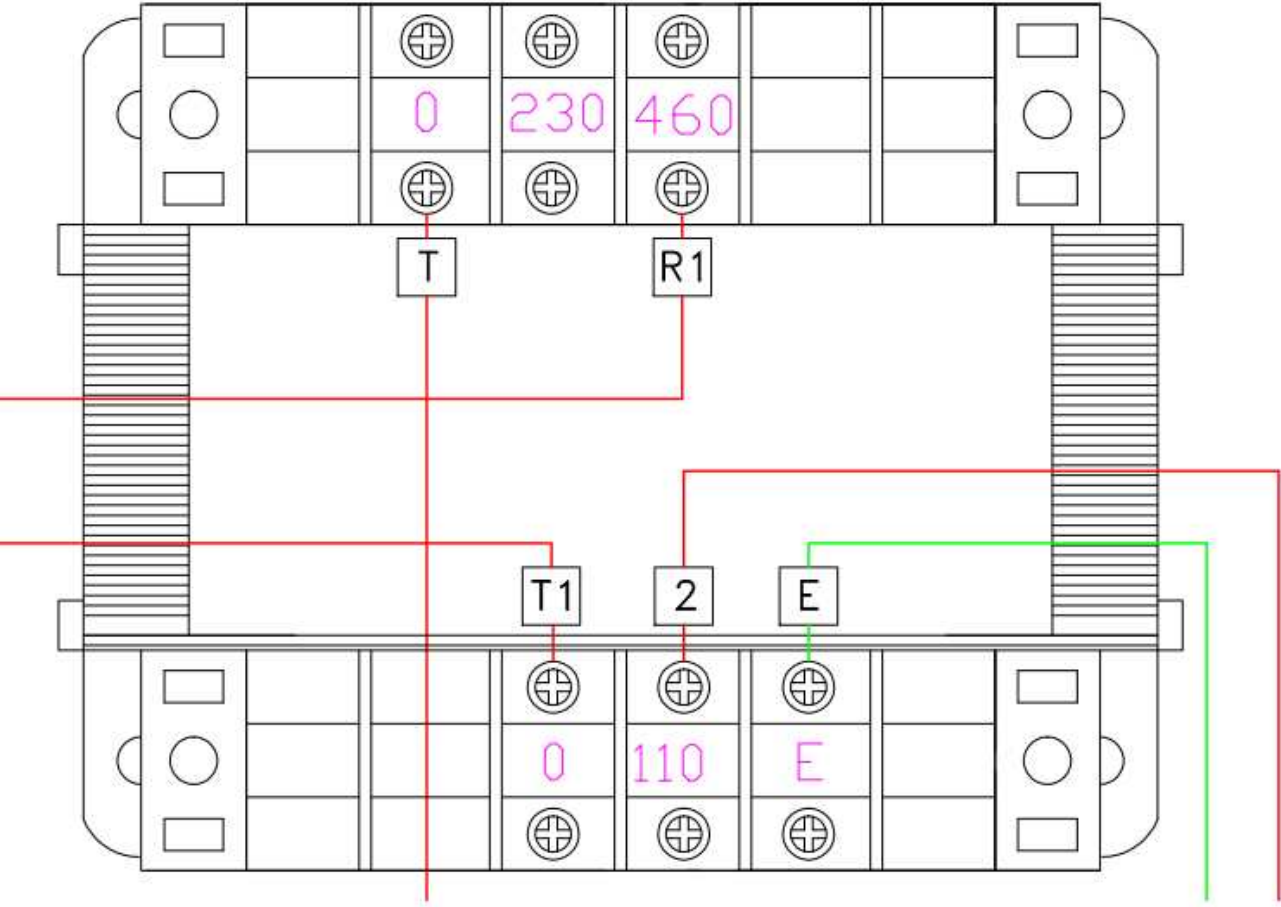


## Main Electrical Box Components for SDC-5-4



◆ Transformer for 460V.

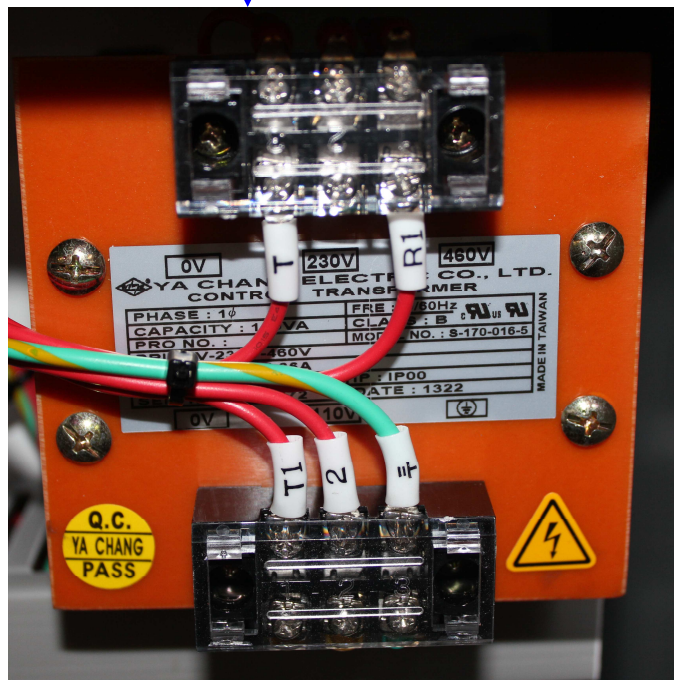

# Main Electrical Box Components for SDC-5-4

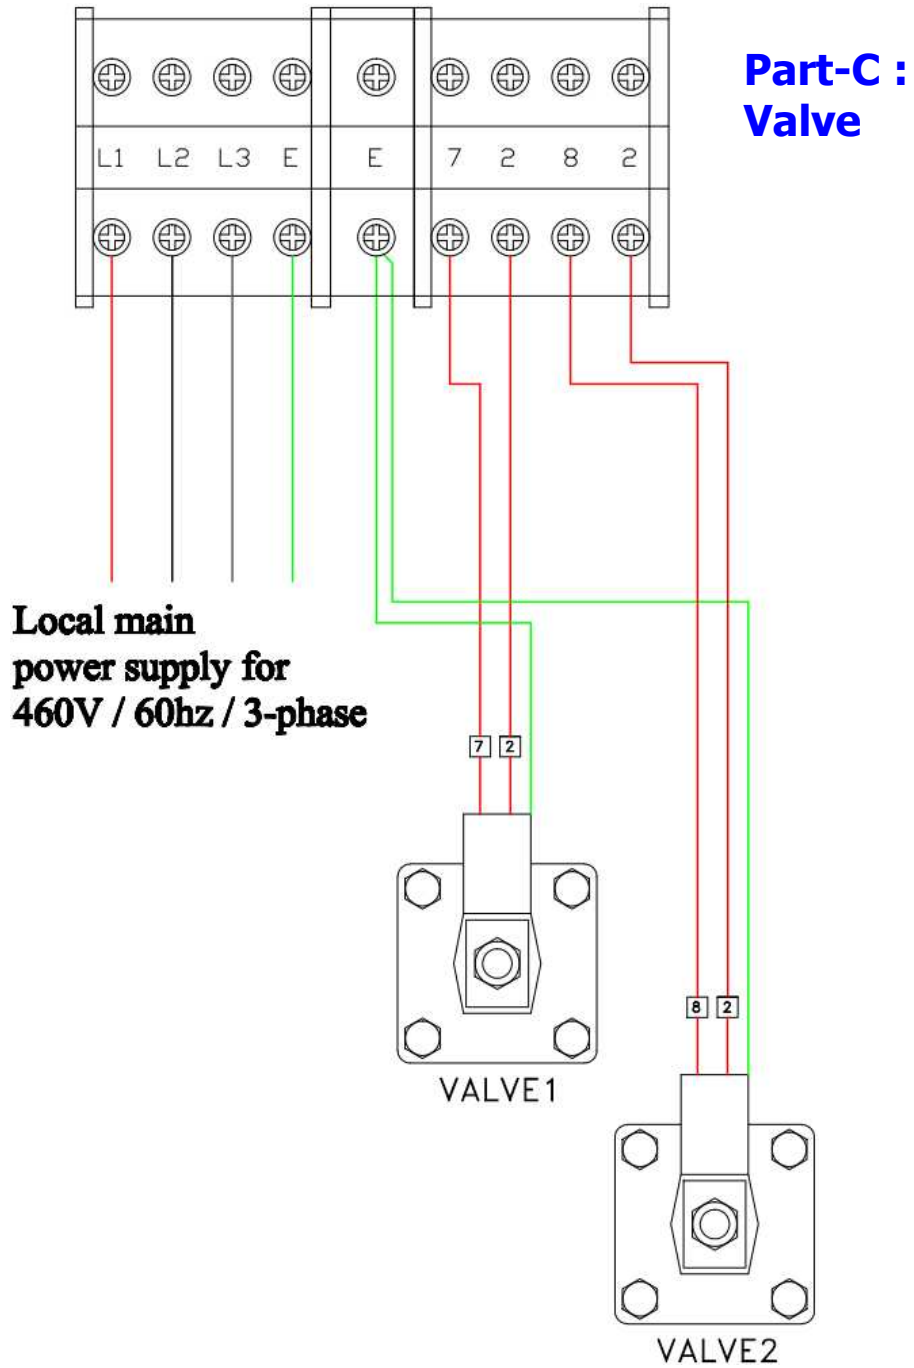

# Main Electrical Box Components for SDC-5-4



◆ Air pulse jet system.




◆ Valve.



# Main Electrical Box Components for SDC-5-4

## Part-D : Magnetic Contactor Thermal Relay

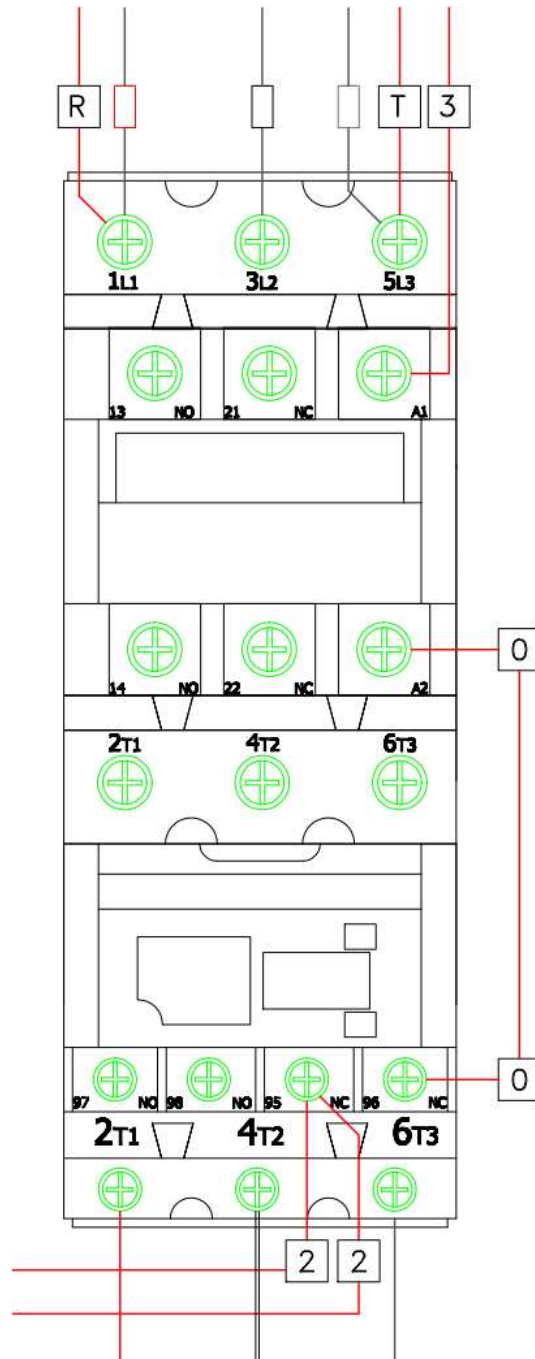



# Main Electrical Box Components for SDC-5-4



◆ Magnetic contactor.



◆ Thermal Relay for motor of 5HP.

