


# RC-05 SCHEMATICS DRAWING I

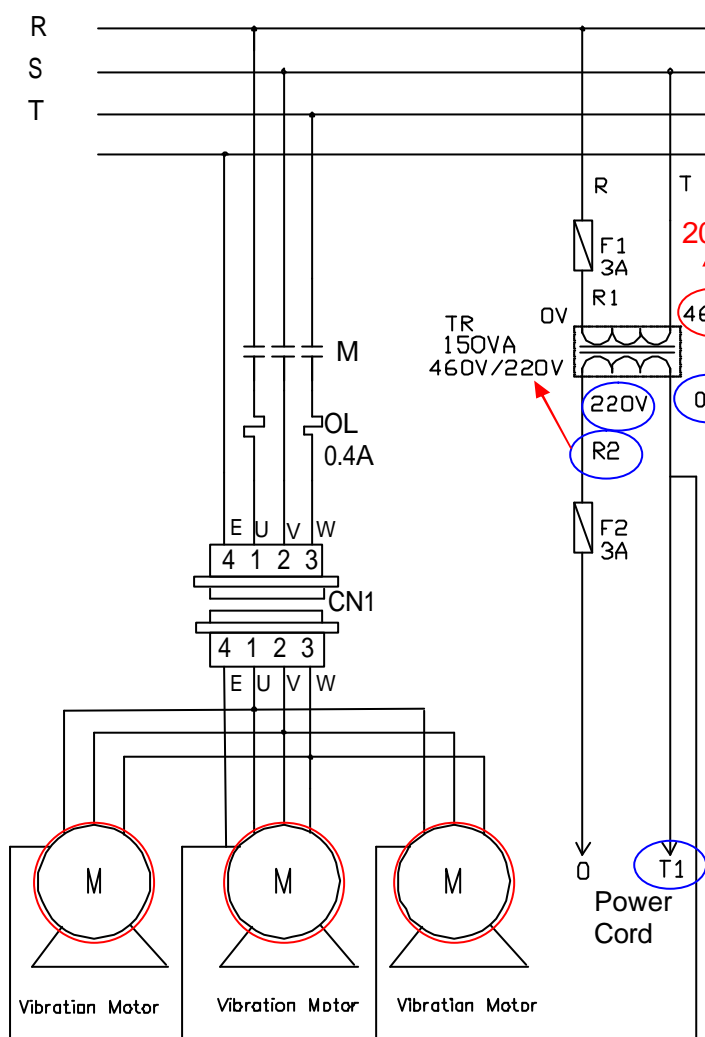


## Step 1:

Replace the (3) Vibration Motors.

## Step 2:

Simply change the transformer from 460V to 208V and connect the parts circled in **blue** back to its positions.

Ensure that R2 is connected to 220V

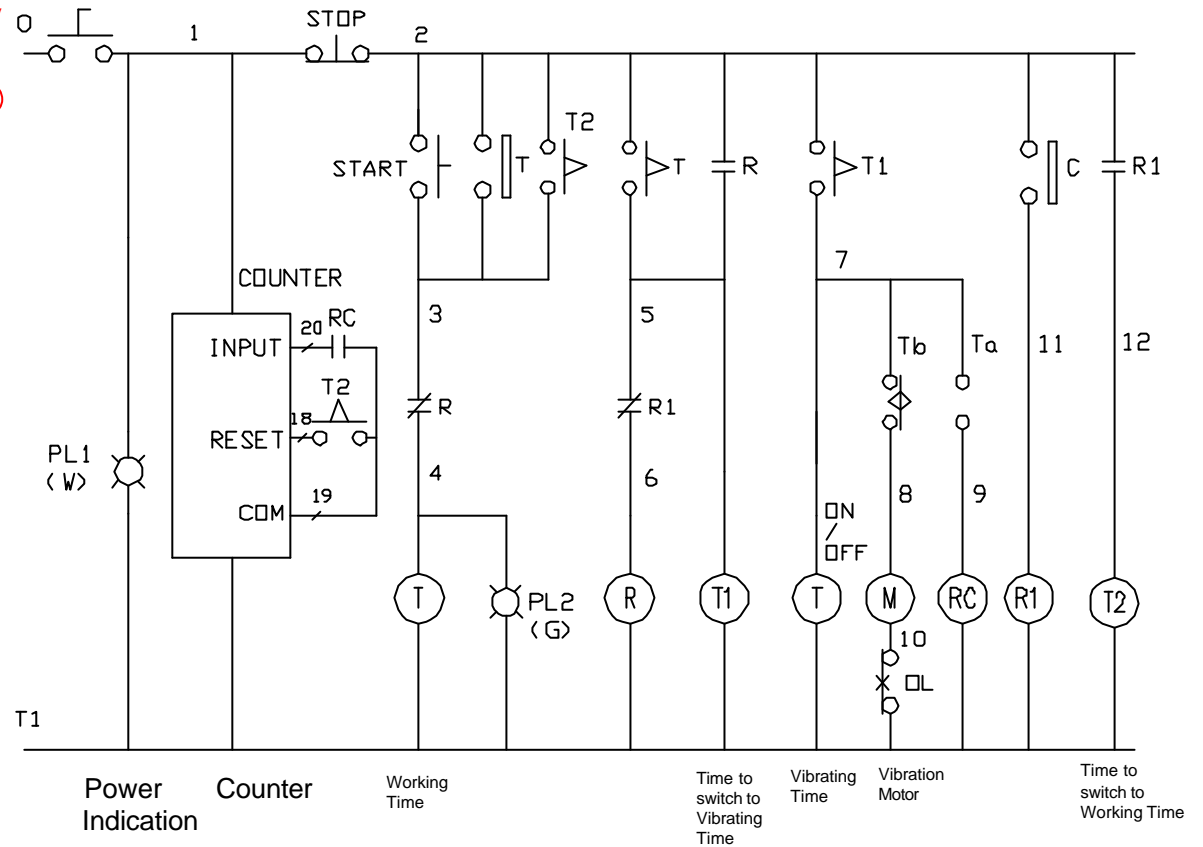

## REMARK:

If 208V is not shown on transformer, please connect to 220V or 230V.

208V = 220/230V on the transformer.