

Customer:	102503, 10			
Customer PO#:				
AVANI SO#:	Tested By:			
Coriol #1	122503-01 / 122801-01 (pulse control box)			
Serial #:	122503-02 / 122801-02 (blower control box)			
Ship Date / Install Date:				

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.





General Safety Information MACHINE WARNING SIGNS

▲ DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

A WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

▲ CAUTION

in death or serious injury.

Indicates a potentially
hazardous situation which,
if not avoided, may result
in minor or moderate
injury.

Used without the safety alert symbol () indicates potentially hazardous situation which, if not avoided, may result in property damage.



 
Warning of electric shock



Do not expose the equipment to rain or use in damp locations.







Do not use the equipment around flammable products, if not avoided, sparks can ignite vapors from flammable products. Read and understand all warnings and operating instructions before using this equipment. Failure to follow all instructions may result in electric shock, fire, and/or serious personal injury or property damage.

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.





TABLE OF CONTENT

MACHINE WARNING SIGNS	
Specifications	
ADDITIONAL CARTRIDGE COLLECTOR SAFETY RULES	7
Assembly	8
Installation	
ELECTRICAL INSTALLATION	8
Operation	g
Control Panel	12
Assembly Hardware	13
Assembly Procedure for Fan/Motor Assembly	14
Blower Curves	15
Repair Parts Illustration	16
Repair Parts List	17
Technical Data for Repair Parts	18
Appendix 1 - Electrical Circuit Diagram	24
Contact Information	
Specifications	
Motor	
Air Volume (C.F.M.)	
All volume (C.F.I*I.)	iii w o or

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

UL Individual Control Boxes for Cartridge Collector and Blower





Cartridge Filter: Ø325mm x 1320mm x 16pcs (Ø12.8" x 52" x 16pcs)

Material: Polyester with TEFLON coating. Filter Area: $19m2 \times 16 = 304m2 (3271.04 \text{ ft2})$

Pleat Depth: 48mm

Horizontal Positioned Filters, Continuous Welded Seams, Gasket and Latched Doors, Powder Coated Paint and Reverse Jet Pulse Cleaning

Include:

- Filter Chamber

- Inlet Square Pipe (need dimensions)

- Fan/motor combinations

No. of Valves: 4

Compressed Air Requirement: 90 PSI Compressed Air Reservoir: 15.8 gallon

Inlet Air: 3/4"

Construction: 13 Gauge for panel; 11 Gauge Steel Cabinet

Max. Operating Temp.: 120°C

Paint Color: Avani Blue

Dimension (L x W x H): 102.2" x 123.7" x 180.6" (2593.5 x 3140.5 x 4584.8mm)

***with Feet Underneath the machine.

***1" connector welded to the right side of the collector

***w/ silencer



***Roll Media: RM-6000

***VFD

***Pulse control box run off of 120V, 60HZ, 1-phase, no transformer inside the pulse box. Pulse box located inside the building on the collector.

***Blower control box: 460V/ 60Hz / 3-phase, with transformer. Blower box located inside the building.



General Safety Information

(Continued)

▲WARNING

Use this product carefully to

effectively avoid any possible danger.

Observe the following safety

regulations to avoid bodily injury due

to electrocution during use.

Read this Manual carefully before operating the product and preserve the Operation Manual properly.

- 1. Keep work area clean and organized.
 - A disorderly working environment will cause inconvenience and danger during operation.
- 2. Check if the working environment is suitable for using the product.
 - Do not use the product in a humid environment.
 - Use the product in a good working environment to reduce risks.
 - Do not use the product in a flammable gas or liquid environment to avoid danger.
- 3. Keep other persons away from the

product, except for the operator, to avoid danger.

- Do not let children get close to the product. All wires used by the product shall be in a safe location to prevent children from touching them.
- 4. All tools shall be safely stored.
 - When the tools are not used, please store them in a dry place safely beyond the reach and access of children.
- If the machine breaks down, contact a service technician. Do not attempt to repair and possibly damage the machine.
- 6. When using the product, be sure to put on a suit and mask.
- 7. Use the electrical wires correctly.
 - During use, do not drag the electrical wires forcefully. Do not use these wires if fraying or current leakage occurs to avoid injury to the operator.
- 8. Before replacing parts, shut off power to the machine.
 - Check that the switch is in "on" or "off" position. Do not attempt the replacement when the machine is

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.



avanı

- running. To replace parts or filter material, make certain that the switch is "off".
- Use the power cord correctly. The total length of power cord shall not exceed 10 feet to avoid low power due to a drop in voltage and to prevent a possible hazard.

▲WARNING

When connecting the product,

always follow the instructions in the Operation Manual to avoid injuries.

- 10. Care and Maintenance:
 - Confirm that the parts/accessories have been fully assembled and will not adversely affect the machine operation.
 - Check if the machine is operated properly.
 - Replace damaged parts or accessories according to the instructions of the Manual. If the said instructions are not specified in the Manual, have a professional technician carry out the maintenance or replacement.
 - Check that the electrical specifications of this machine meet safety requirements, and that the maintenance is carried out by a

- professional technician. Use original manufacturer's parts and accessories to avoid injury.
- If a problem occurs, contact your dealer immediately.

ADDITIONAL CARTRIDGE COLLECTOR SAFETY RULES

The Cartridge Collector can be dangerous if it is operated incorrectly. Therefore, the product must be used cautiously to avoid causing a hazard or damage. Unnecessary injuries may occur by failing to follow the instructions of the Safety Rules Manual. Be sure to put on protection equipment or suit that can protect your body, such as helmet and eye mask to avoid injuries from occurring. If any doubts or any unfitness occurs during use, be sure to stop the operation immediately. Keep in mind that the user shall be liable for using according to the specified safety rules and for operating the machine correctly.

- Read this Manual carefully before operating the product.
- Be sure to follow local electrical and safety regulations and observe the electrical safety standards practiced in the relevant area. All electrical wire



- connections and installation shall be carried out by a professional technician.
- Do not operate the product near flammable materials, as sparks may ignite these materials and cause an explosion. Please confirm there aren't any flammables near the working site to avoid hazard.
- 4. This product is suitable for collecting smoke and oil gas. Do not use it in collecting iron chips and dust at the same time to avoid producing sparks.
- 5. Before replacement of parts or filter materials, be certain that the switch is disconnected.
- Do not kink the power cord and keep it away from oil, chemicals or flammables.
- 7. Check that the voltage, phase count and grounding wire match the machine requirements.
- 8. When the fan blades are operated at high speed, do not reach hand near these blades to prevent finger from breaking or clothes/necktie from getting caught. Do not put the hand or foreign matter into the air inlet to avoid getting caught in the high-speed rotation of fan blades.

When not in use, all air inlets of Cartridge Collector shall be covered.

Assembly

Do not connect the Cartridge Collector



before the assembly is

finished and you have read and understood all of the precautions stated in the Manual.

NOTE: For correct assembly, refer to the Assembly Procedure.

Installation

MOVING AND TRANSPORTATION

The weight of this machine is about 5,026.5 lbs. It CANNOT be handled and transported without the help of lifting tools. For your safety, read all instructions carefully.

Do not move without the help of others



to avoid causing danger.

ELECTRICAL INSTALLATION

POWER CONNECTION

 Confirm that the power is properly connected under normal power supply condition. It is recommended to provide manual shutdown device before connecting power.



 It is recommended to protect the control equipment with suitable grade of fuse, and the length of fuse and power cord shall not be over 10 feet.

SHUTDOWN

- 1. Disconnect power by manual method.
- 2. When stopping operation, check if the switch is under off status.

EARTHING WIRE

Connect yellow/green wires to the earthing wire power jack. Confirm that the earthing wire has been properly connected before connecting main power cord to the machine at all times.

AWARNING

Do not disconnect the wiring jack

before cutting off power! POWER INSTALLATION AND STORAGE

The electrical power is configured as following. If conditions are beyond the scope stated below, then it is required to ensure that the power is well arranged and safe.

- Ambient temperature: Between 41°F and 131°F. If the time is over 24 hours, then the ambient average temperature shall not be over 122°F.
- Humidity: Between 30% and 95%
- Altitude: 3,280 feet

Moving and Storing: -13°F to 131°F.
 For short-time storage (less than 24 hours), the storage temperature can be up to 158°F.

Operation

PRIOR TO START UP

Purpose: The Cartridge Collector is specially suitable for treating the smoke generated during ordinary processing work, which can effectively collect and screen the smoke resulting from the work in maintaining the air quality of the working environment.

- Before starting the machine, be sure to read this Manual carefully.
- Before starting the machine, check if relevant safety protection measures have been taken according to the Manual.
- Before starting the machine, watch the motor turning direction according to the instruction of arrow direction.

START UP

- To ensure satisfactory performance for the Cartridge Collector, please confirm the air volume, power and the matching table of the Cartridge Collector.
- 2. Connect power according to electrical



- installation procedure after installing the Cartridge Collector and the blower. Disconnect power according to electrical installation procedure when the machine is not used.
- The Cartridge Collector shall be turned on and off by pushing I/O button. Under normal operation status, use such I/O button.

FILTER CLEANING

 Attach compressed air to the unit for cleaning purposes, at a source pressure of 90 PSI. The connection point is accessed by removing the panel on the side of the unit where the PSI label is in place and requires a 3/4" NPT fitting. A regulator must be incorporated in line to set pressure. Do not exceed 90 PSI pressure.



2. Refer to control panel for initiating power


- to the motor and subsequent vacuum from the unit.
- 3. The pulse cleaning is used for filter cleaning and for maximum effectiveness should be used as follows:
- Turn off ONLY the motor power and leave the main power on for approximately 1 hour until ALL cartridges are pulse-jet-cleaned. This ensures the cartridge cleaning efficiency when you turn on the power next time.
- Cleaning as noted above should be daily or as any decrease in vacuum is observed.
- If the collector has a gauge, cleaning is required when the gauge reads or is near 4" WC.
- If operating vacuum is weak after pulse cleaning, contact AVANI for filter replacement. (See contact list in this manual)

Unpacking

The machine should be unpacked carefully. Check if the machine and components are consistent with those indicated in the Parts List. If any doubt arises or when the components are incomplete, contact your dealer.



Dimensions (in mm/inches)

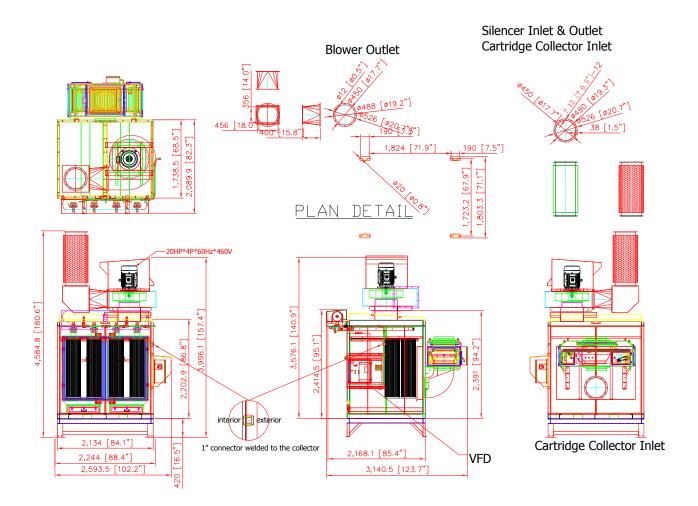




Control Panel

Time Setting for Valve (Pulse-Jet):

- 1. No. of Valves: 4
- 2. Pulse-jet Time for each Valve: 0.2 sec
- 3. Valve Interval: 30 seconds (pulse-jets first cycle when turning on the power and circulate in every thirty seconds).
- 4. Turn off ONLY the motor power and leave the main power on for approximately 1 hour until ALL cartridges are pulse-jet cleaned. This ensures the cartridge cleaning efficiency when you turn on the power next time.

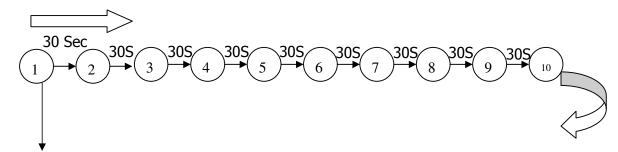

Pulse-jet time: 0.2 sec




Assembly Hardware

Johnson Controls - SDC-20-16MDF w/ RM-6000

No.	Model	Part Name	Specification	Q'ty	Remark
1	SDC-20-16MDF	Sleeve Anchor	3/4"*4"	4	Bolted on the Ground
		Hex Screw	1/2"*1"	12	
2	SDC-20-16MDF	Flat Washer	1/2"*OD25*2T	24	Adjacence of Blower and Blower Base
_	3DC 20 1011D1	Lock Washer	1/2"	12	Adjucence of blower and blower base
		Hex Nut	1/2"	12	
3	SDC-20-16MDF	Hex Screw	3/8"*3/4"	6	Adjacence of Pulse Control Panel and
,	3DC 20 10MDI	Flat Washer	3/8"*OD23*2T	6	Machine Body
		Hex Screw	3/8"*1"	14	
4	SDC-20-16MDF	Flat Washer	3/8"*OD23*2T	28	Adjacence of Blower and Square to Round
		Hex Nut	3/8"	14	
5	SDC-20-16MDF	Hex Screw	3/8"*1"	12	Adjacence of Causes to Dound and OO degree Fiberry
Э	2DC-20-10MDF	Flat Washer	3/8"*OD23*2T	12	Adjacence of Square to Round and 90 degree Elbow
6	SDC-20-16MDF	Hex Screw	3/8"*1"	12	Adjacence of 00 degree Elbourand Cilencer
0	2DC-20-10MDF	Flat Washer	3/8"*OD23*2T	12	Adjacence of 90 degree Elbow and Silencer
		Hex Screw	3/8"*1"	12	
7	SDC-20-16MDF	Flat Washer	3/8"*OD23*2T	24	Adjacence of Flange and Silencer
		Hex Nut	3/8"	12	
		Hex Screw	1/2"*1"	32	
8	SDC-20-16MDF	Flat Washer	1/2"*OD25*2T	64	Adjacence of Feet and Feet
		Hex Nut	1/2"	32	
		Hex Screw	1/2"*1"	28	
9	SDC-20-16MDF	Flat Washer	1/2"*OD25*2T	56	Adjacence of SDC-20-16MDF and Feet
		Hex Nut	1/2"	28	
10	SDC-20-16MDF	Sleeve Anchor	3/8"*3"	4	Bolted Blower Control Panel Base to the Wall
		Hex Screw	3/8"*1"	16	
11	RM-6000	Flat Washer	3/8"*OD23*2T	16	Adjacence of RM-6000 and RM-6000 Fixing Base
		Lock Washer	3/8"	16	Duse
12	RM-6000+	Hex Screw	1/2"*1"	6	Adjacence of SDC-20-16MDF and RM-6000
12	SDC-20-16MDF	Flat Washer	1/2"*OD25*2T	6	Fixing Base



Assembly Procedure for Fan/Motor Assembly

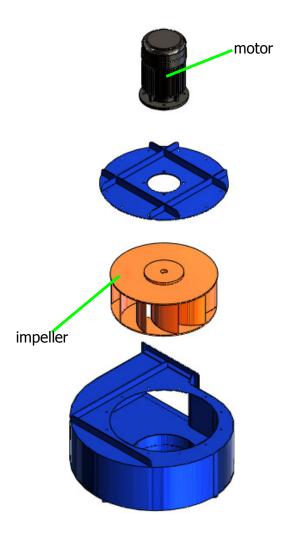




Blower Curves

SDC-20-16MDF DUST COLLECTOR

Model	Max static pressure (inch/H2O)	Max CFM	Нр	Volts	Hz	Impeller	Inlet
SDC-20- 16MDF DUST COLLECTOR		8500	20HP x 1 pc	460V	60		

SDC-20- 16MDF	Static pressure (Inch/H2O)	8	7	6	5
TOWIDE	CFM	8500	9500	11300	

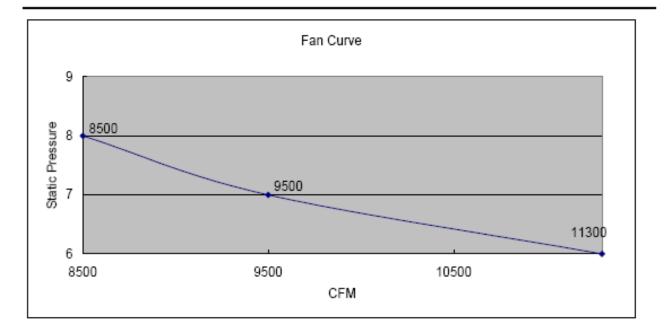



Repair Parts Illustration For Repair Parts, call +1-919-570-2862 24 hours a day – 365 days a year

Please provide following information:

- -Model number
- -Serial number (if any)
- -Part description and number as shown in parts list





Repair Parts List


Repair Parts List for Dust Collector

Reference Number	Description	Part Number	Quantity
1	Solenoid Valve	AVANI-SDC-20-16MDF-1	4
2	Door Locker	AVANI-SDC-20-16MDF-2	2
2-1	Door Locker Kit	AVANI-SDC-20-16MDF-2-1	2
2-2	Door Locker Kit	AVANI-SDC-20-16MDF-2-2	1
2-3	Door Locker Kit	AVANI-SDC-20-16MDF-2-3	2
2-4	Door Locker Kit	AVANI-SDC-20-16MDF-2-4	2
2-5	Door Locker Kit	AVANI-SDC-20-16MDF-2-5	1
2-6	Door Locker Kit	AVANI-SDC-20-16MDF-2-6	1
2-7	Door Locker Kit	AVANI-SDC-20-16MDF-2-7	1
3	Cartridge Filter	AVANI-SDC-20-16MDF-3	16
3-1	Filter Handle (left)	AVANI-SDC-20-16MDF-3-1	1
3-2	Filter Handle (right)	AVANI-SDC-20-16MDF-3-2	1
	Control Box for Air Pulse Solenoid		
4	Valves of the Large Cartridge	AVANI-SDC-20-16MDF-4	1
	Collector		
5	Feet	AVANI-SDC-20-16MDF-5	4
6	Blower and Motor	AVANI-SDC-20-16MDF-6	1
7	Control Box for Blower and Motor	AVANI-SDC-20-16MDF-7	1
8	Noise Reducer	AVANI-SDC-20-16MDF-8	1




Technical Data for Repair Parts

Reference Number	Description	Part Number	Quantity
1	Solenoid Valve	AVANI-SDC-20-16MDF-1	4

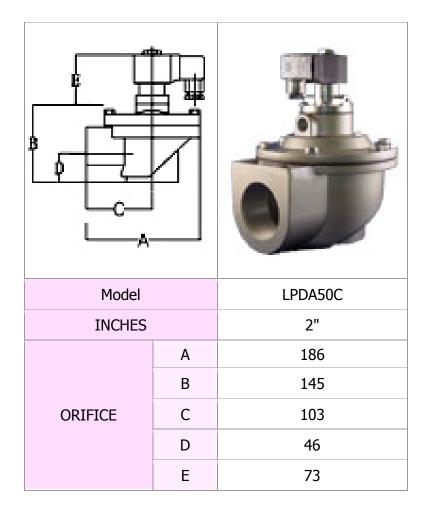




eference lumber	Description	Part Number	Quantity
2	Door Locker	AVANI-SDC-20-16MDF-2	2

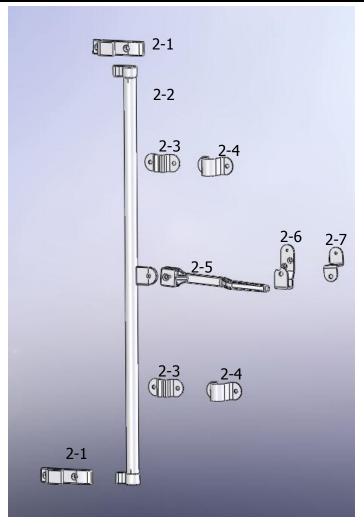




Reference Number	Description	Part Number	Quantity
3	Cartridge Filter	AVANI-SDC-20-16MDF-3	16

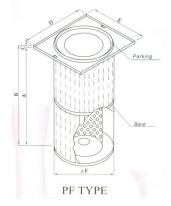

PF TYPE (Measurement m/m)

Diameter	Fold Depth	А	В	С	D	E	F	Weight kg	Filtering Area M ²
325	48	1307	1320	13	406	357	324	17	19

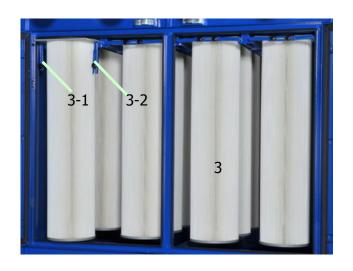


Reference Number	Description	Part Number	Quantity
4	Control Box for Air Pulse Solenoid Valves of the Large Cartridge Collector	AVANI-SDC-20-16MDF-4	1


See appendix for wiring diagram.



Reference Number	Description	Part Number	Quantity
6	Blower and Motor	AVANI-SDC-20-16MDF-6	1

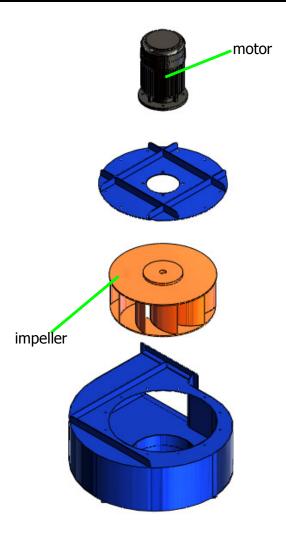



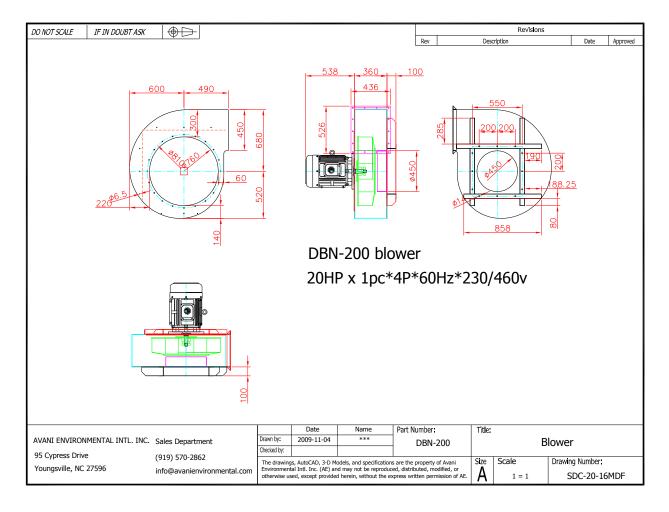


Reference Number	Description	Part Number	Quantity
7	Control Box for Blower and Motor	AVANI-SDC-20-16MDF-7	1

See appendix for wiring diagram.




Reference Number	Description	Part Number	Quantity
8	Noise Reducer	AVANI-SDC-20-16MDF-8	1

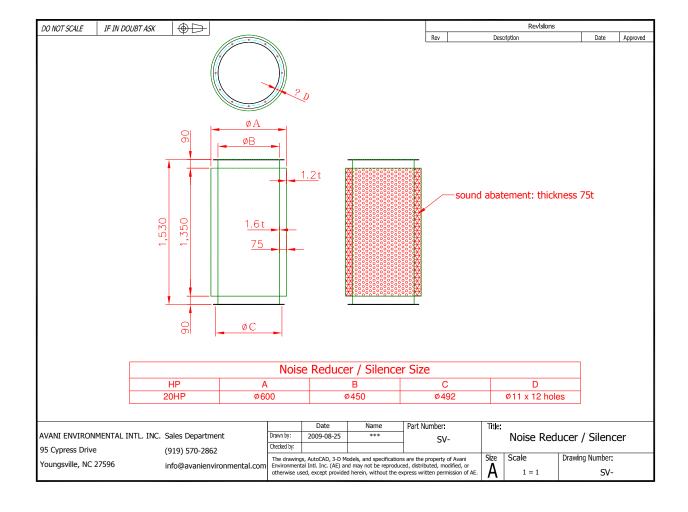




Appendix 1 - Electrical Circuit Diagram

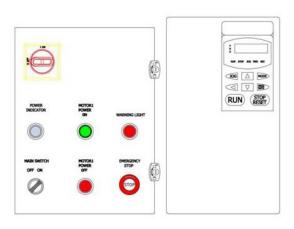







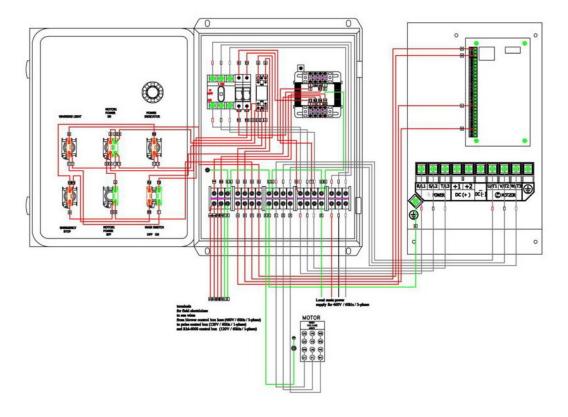




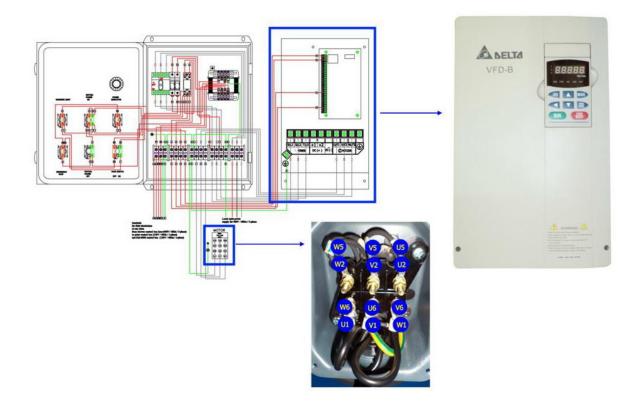



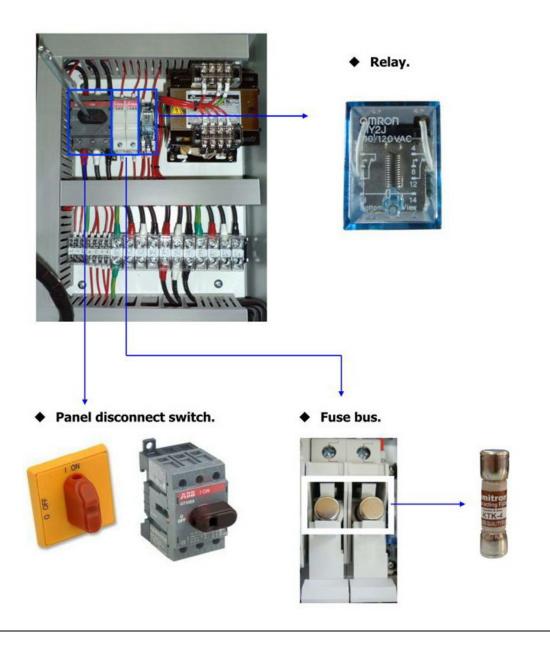



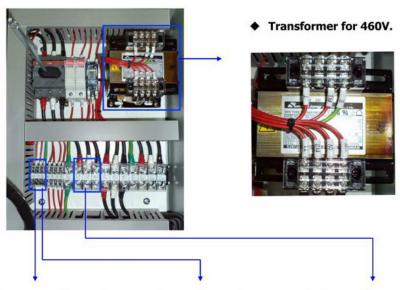

- Connecting to the pulse control box.
- Connecting to the RM-6000 control box.
- Connecting to motor.

















Main Electrical Wiring for SDC-20-16MDF Pulse Control Box

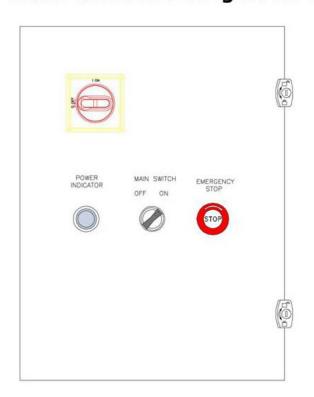






Main Electrical Wiring for SDC-20-16MDF Pulse Control Box

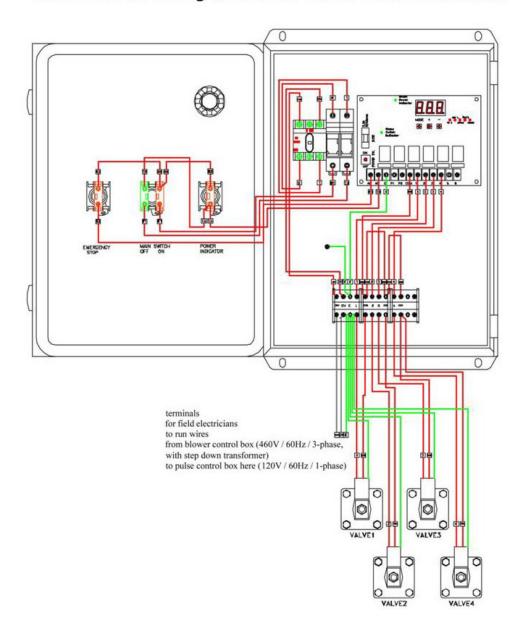



Main Electrical Components for SDC-20-16MDF Pulse Control Box

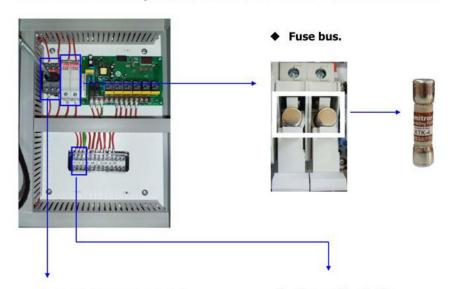

Panel disconnect switch.






 Connecting to the blower control box.








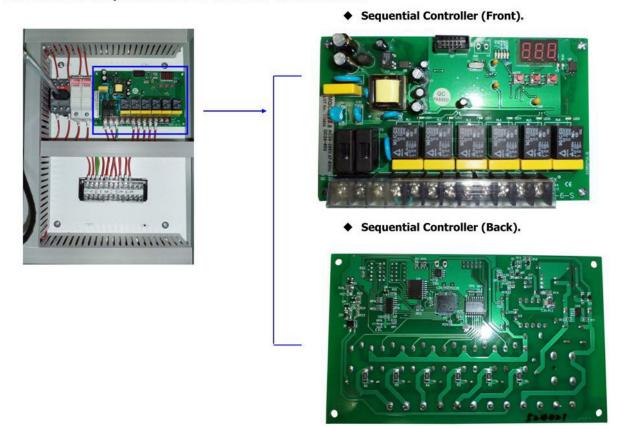



Main Electrical Components for SDC-20-16MDF Pulse Control Box

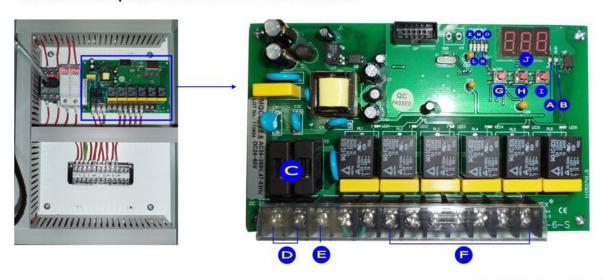


- ♠ A : Power Indicator. ◆ E : Grounding.
- ♦ B : Power Indicator. ♦ F : Valves.
- ♦ C : Fuse. ♦ G : Mode.
- ♦ I : Digits Decreased Button.
- ♦ J: Digits shown.
- ♦ K: Air Pulse Jet Sprayed Length.
- D : Power Terminal. ♦ H : Digits Adding Button. ♦ L : Pulse Jet Intervals.
- ♠ M : Number of Valves.
- ♦ N : Air Pulse Jet
 Cleanses Cartridges

after Machine Stops Operation. (Preserved function).

O: Settings completed.



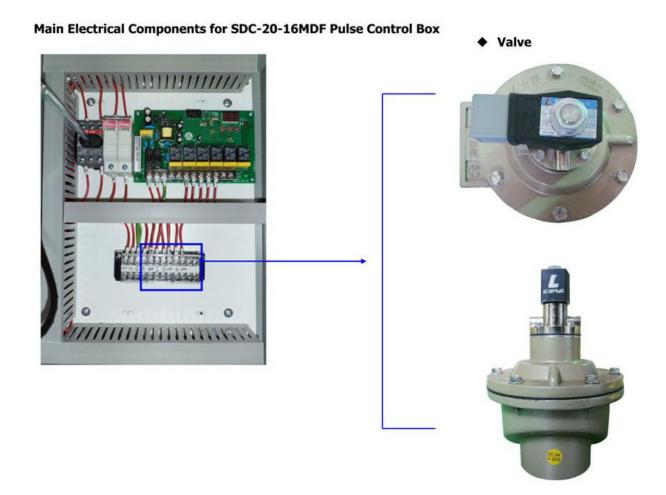



Contact Information

Avani Environmental Intl. Inc. 95 Cypress Drive, Youngsville, NC 27596

Email: info@avanienvironmental.com

www.avanienvironmental.com

Customer Service: info@avanienvironmental.com

Tel: 919-570-2862 ext. 208

Engineering Service: engineering@avanienvironmental.com

Tel: 919-570-2862 ext. 203

