


CONTINUOUS PRECOATING POWDER FEEDING

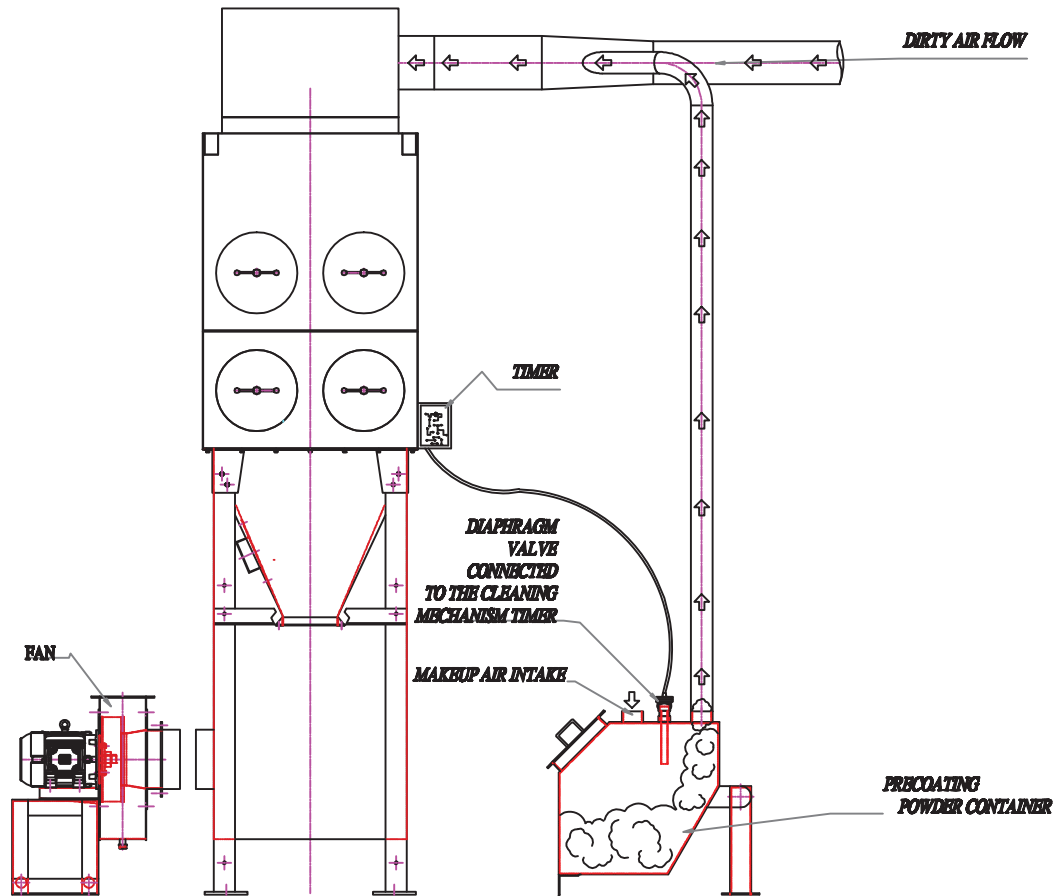

HOW DOES IT WORK.

DURING THE CLEANING PROCESS THE TIMER ACTUATES THE DIAPHRAGM VALVE BLOWING THE DUST INSIDE CONTAINER WHICH IS PULLED BY THE NEGATIVE PRESSURE OF THE FAN MIXING THE PRECOATING POWDER WITH THE CONTAMINATED AIR TO BE FILTERED.

BEFORE ENTERING THE CONTAMINATED AIR IT IS RECOMMENDED TO PRECOAT THE CARTRIDGES UP TO GET AT LEAST 1"wg DIFFERENTIAL PRESSURE