

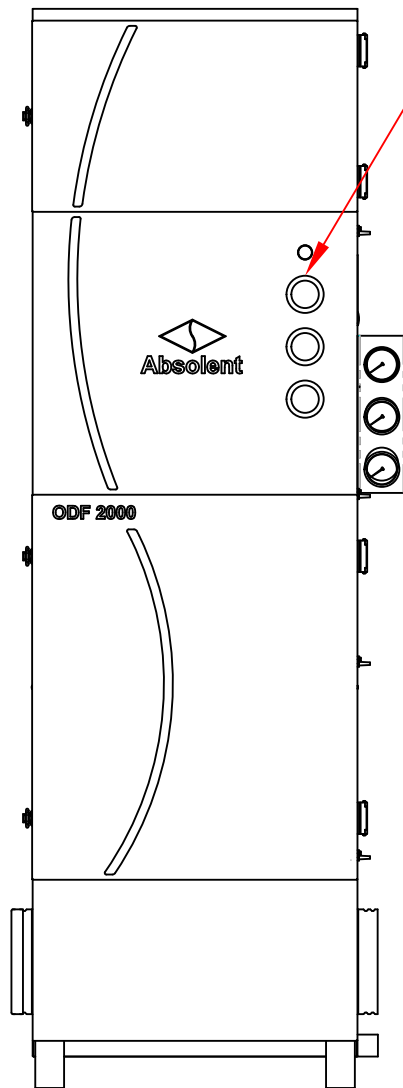


This drawing is not to be copied, shown or exposed without written approval by Absolent AB.

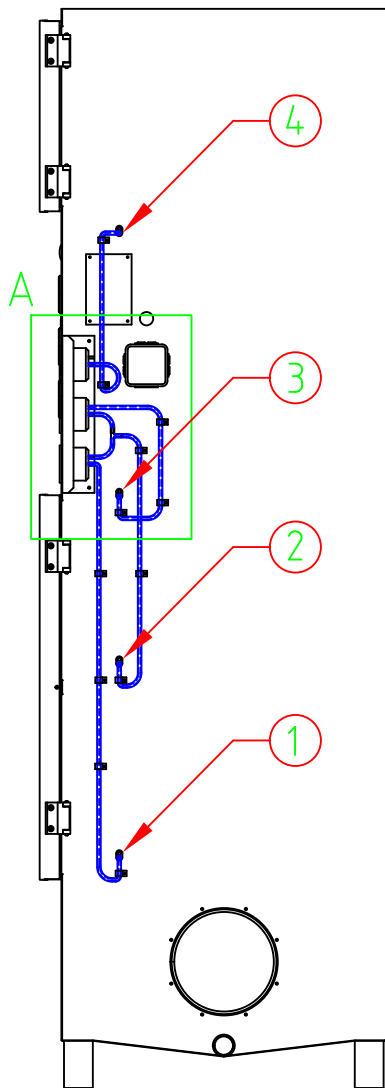

Replace the old manometers with the white plastic covers and plug the hoses on the inside with the black plastic taps.

Detail A

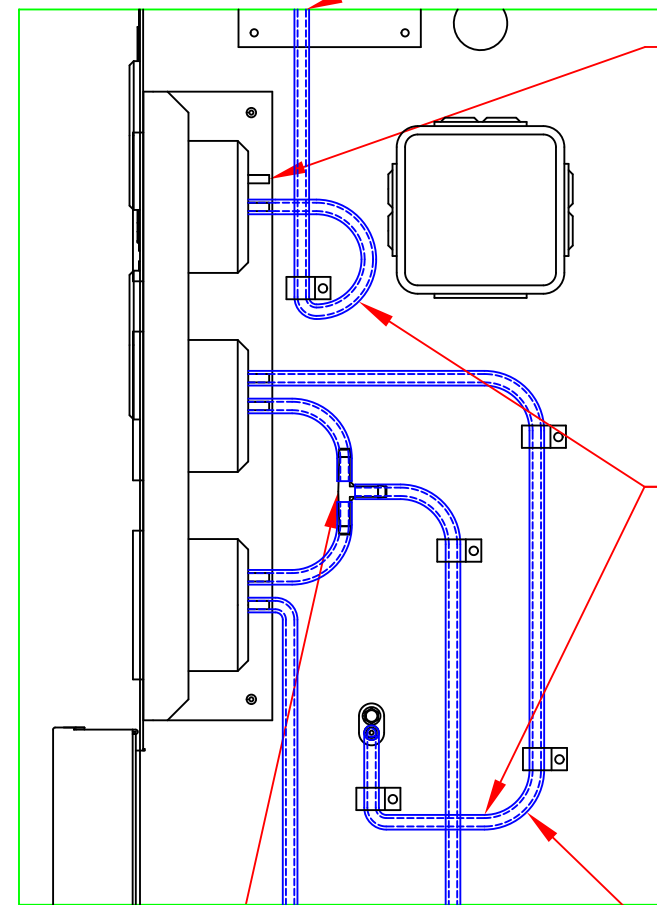

Atmospheric pressure (=no hose needed)

At the lowest point for each hose, a u-bend to stop the oil is created.

T-connection

Designed by: JS	Approved by:	General tolerances: SS-ISO 2768-m Welding symbols: SS-ISO 2553	Projection: METRIC	Sheet no: 1/1	Scale:
			Installation of external manometers for ODF2000		Date: 130122
			Drawing number: EJ13-002		