


DDR-3000 Fan Wiring (Standard Model)

Procedure:

- 1) Remove wires from terminals 1, 2, 3, ground between 3 & 4 (bottom side).
- 2) Install wire labeled L1 to terminal 1
- 3) Install wire labeled L2 to terminal 2
- 4) Install wire labeled L3 to terminal 3
- 5) Install one green wire to ground block
- 6) Connect wire T1 to fan conductor #1 (removed from terminal 1)
- 7) Connect wire T2 to fan conductor #2 (removed from terminal 2)
- 8) Connect wire T3 to fan conductor #3 (removed from terminal 3)
- 9) Connect last green wire to fan conductor ground wire
- 10) Customer power leads are wired to bottom of disconnect switch

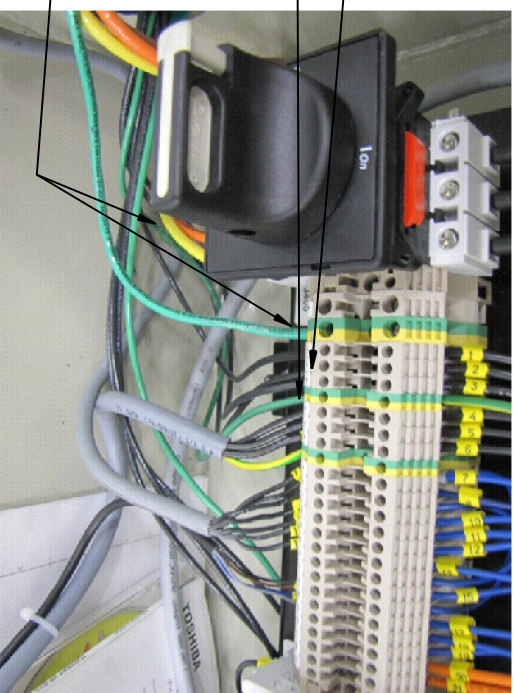

Avoni Environmental
95 Cypress Drive 27596
Youngsville, NC
919-570-2862 # 919-570-2863

Avani

Project: DDR-3000 VFD

Drawing: Fan Wiring

Date: 2/7/11 Drawn by: WWB

Sheet No: 3 of 4 Rev: 1