
Ductwork Layout for Mod 3 Plan View

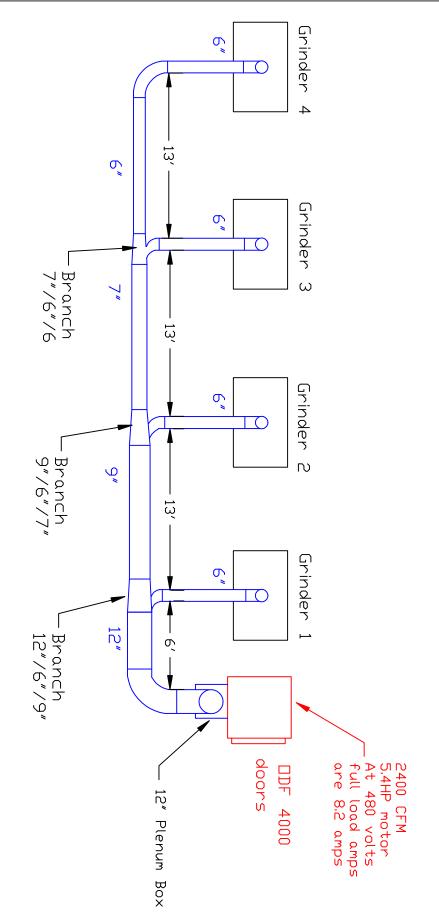

- A) Each drop will have a butterfly damper for air flow
- adjustment,

 B) Bottom of ductwork about 12' off of floor,
- drainage while running.

 D) CFM per drop os 600 CFM C) Absolent to have P-Trap on drain to allow for proper

