

Ductwork Inlet Detail



Side View

Outside of building

30" duct must go between the crossbracing. How far from the center of the crossbracing to the center of the duct to be able to clear the crossbracing?

Perlon inside building

End View

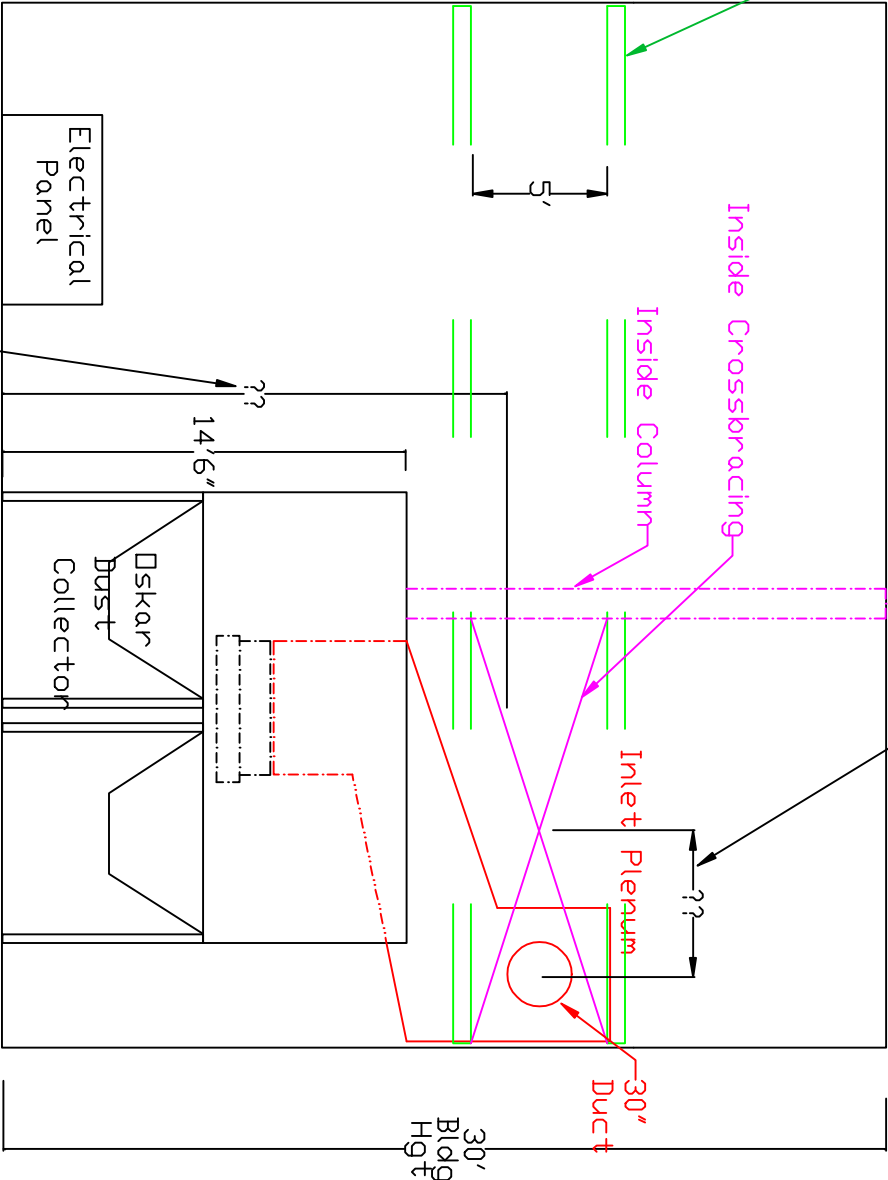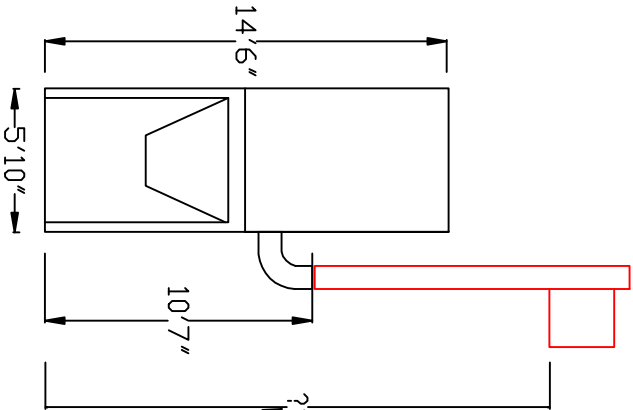

Height from floor to bottom of ductwork. Note: The 30" dia. duct must clear the crossbeam inside.