


Side View of Absolent showing port locations for the Fire Trace System

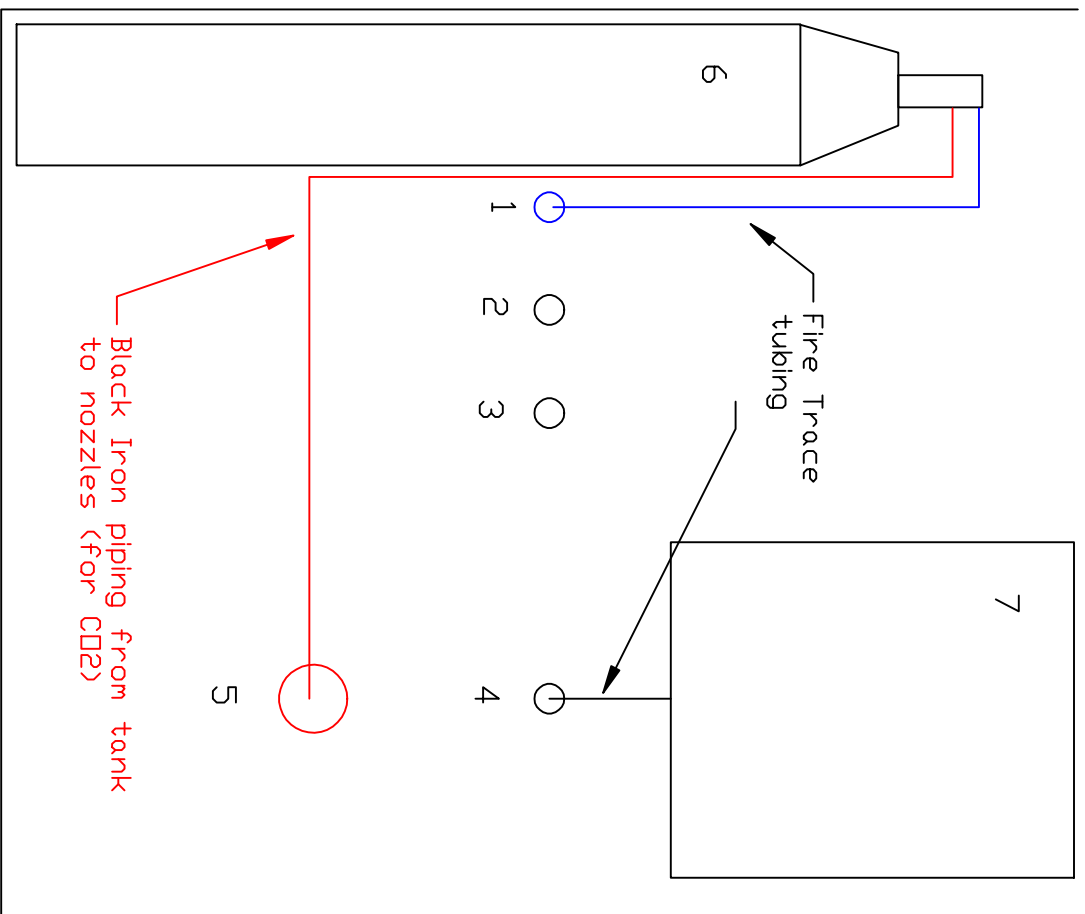

- 1) Line from CO2 Tank to Fire Trace tubing inside Absolent
- 2) Manual Release with Pressure Gauge
- 3) Fill port (to set Fire Trace system)
- 4) Tubing port to connect to the pressure switch in control panel
- 5) Port to connect tank to nozzles inside
- 6) CO2 Tank
- 7) Main control Panel

Industrial Air Quality
 102 AG DRIVE 27596
 TOURINGVILLE, NC
 PH 919-562-7181 F# 919-562-7182
IAQ
 Project: Cryovac
 Drawing: Fire Trace
 Date: 11/15/04 Drawn by: RAV
 Sheet No: