


Absolent Ductwork Layout

Plan View

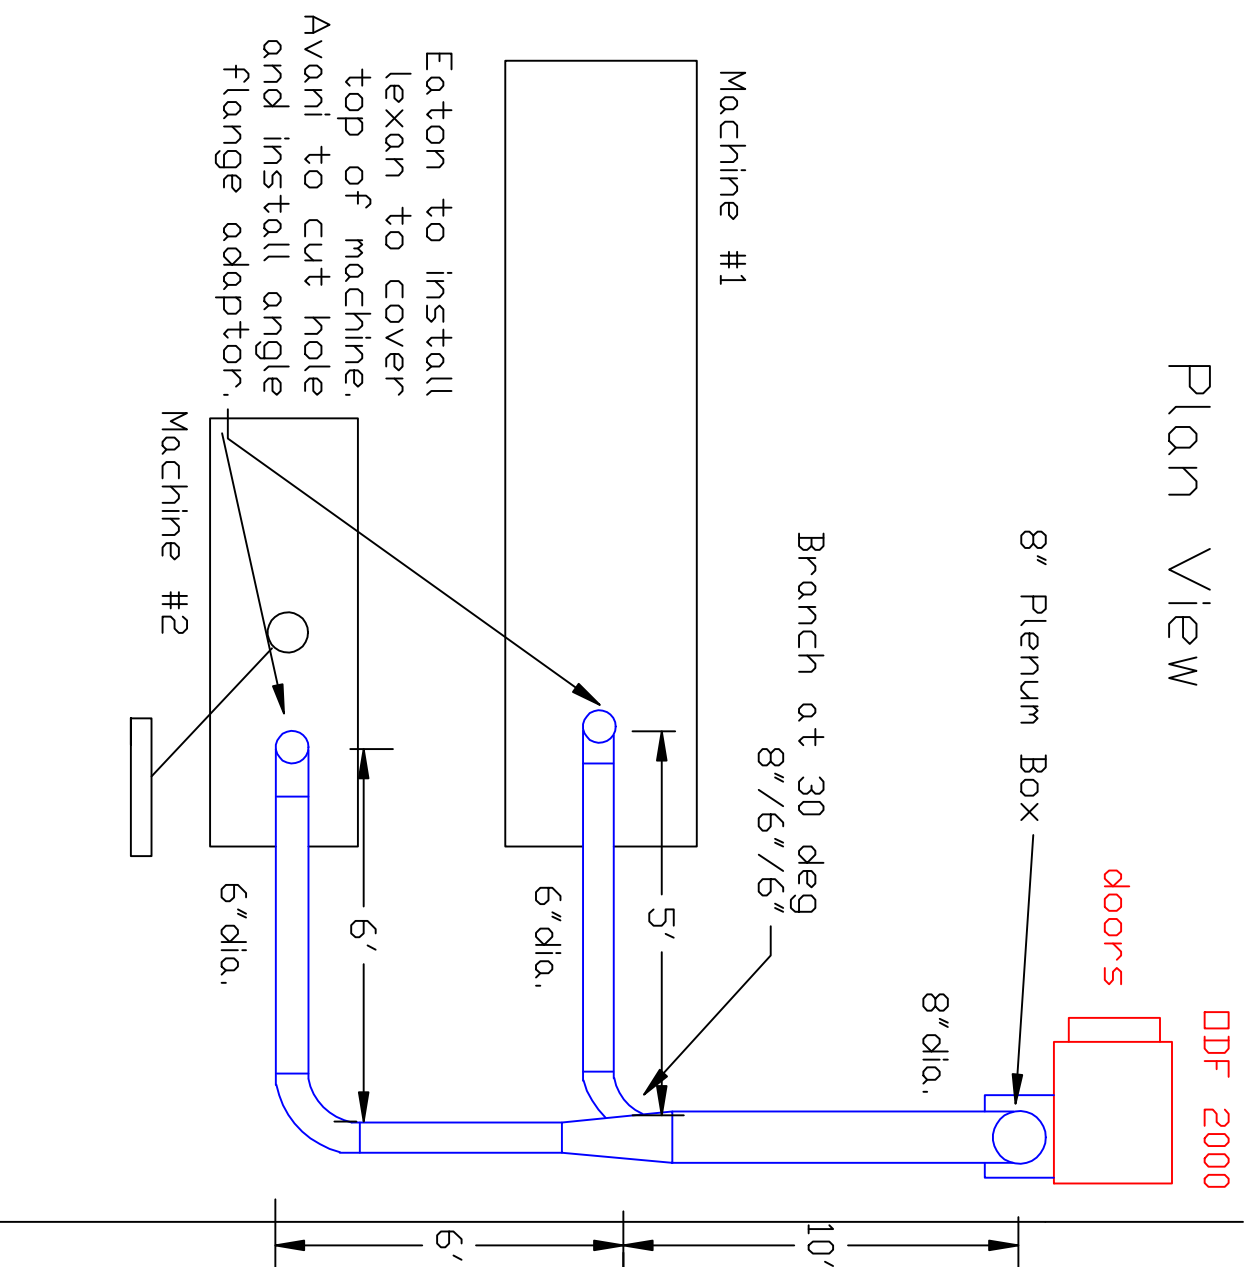

Notes:

- A) Install Throttle valve at each drop.
- B) Eaton to install lexan on top of each machine. Avani will cut hole.
- C) Install 6" dia. angle flange adaptor on the lexan.
- D) Drain line: PVC P-TRap with ball valve.
- E) PDF 2000 has 3 HP motor. At 460 volts the full load amps are 5.0

Avani Environmental
95 Cypress Drive 27596
Youngsville, NC
PH 919-570-2862 F# 919-570-2863

Avani

Project: Eaton

Drawing: Ductwork layout

Date: 11/4/11 Drawn by: RAV

Sheet No: