


Ductwork Layout for Absolents

Plan View

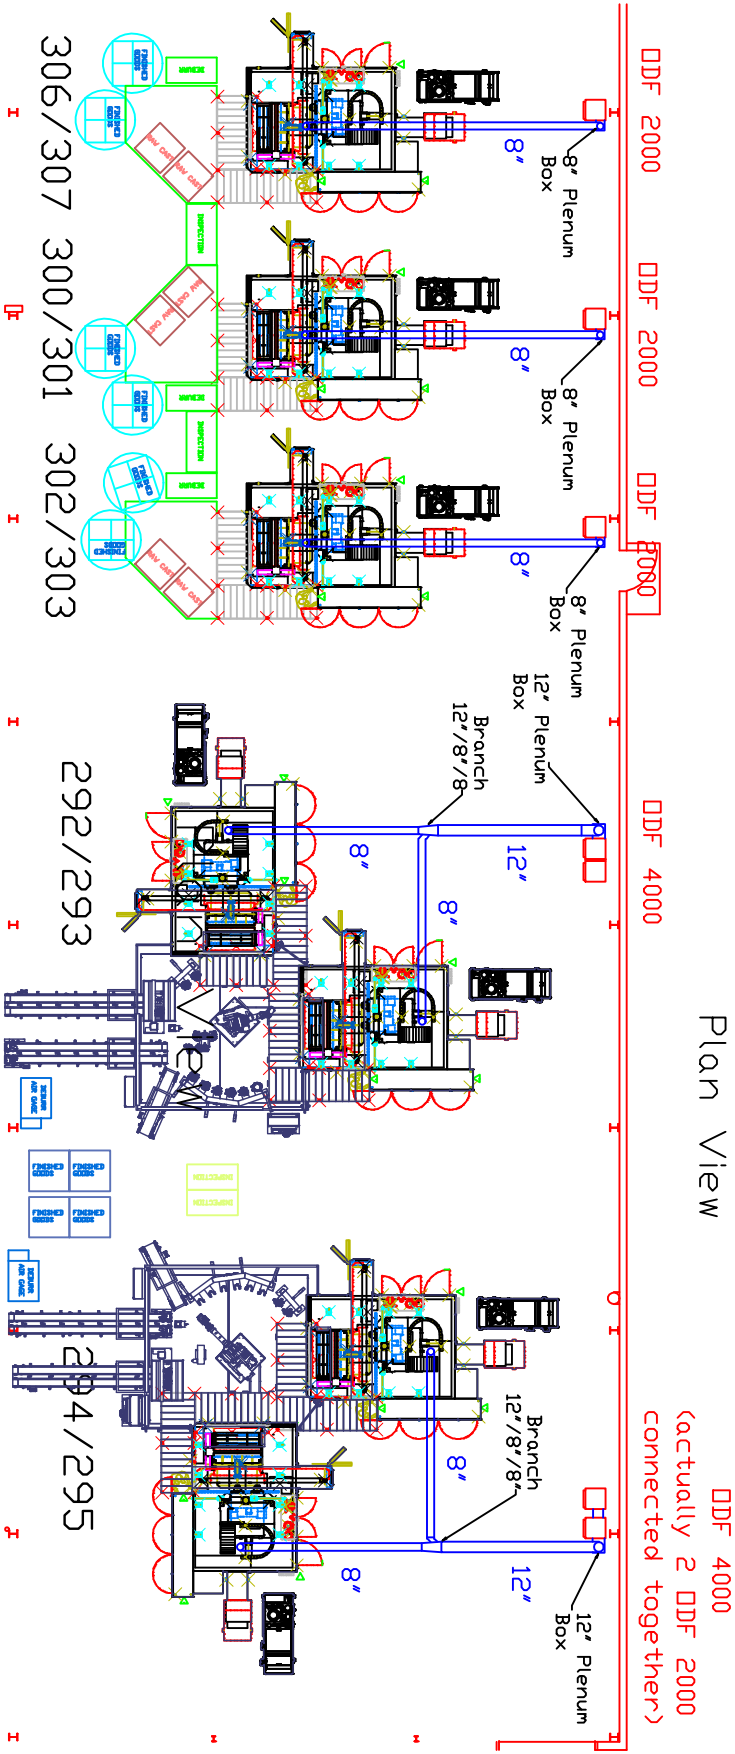

- Note:
- A) Each drop will have a butterfly damper for air flow adjustment.
 - B) Each drop will have an angle flange adaptor to connect to the machine.
 - C) Bottom of ductwork about 20' off of floor.
 - D) Each Absolent will have a P-Trap on the drain outlet.