


Absolent Ductwork Layout


DDF 1000 Machine #2704 K&B Duct

Plan View

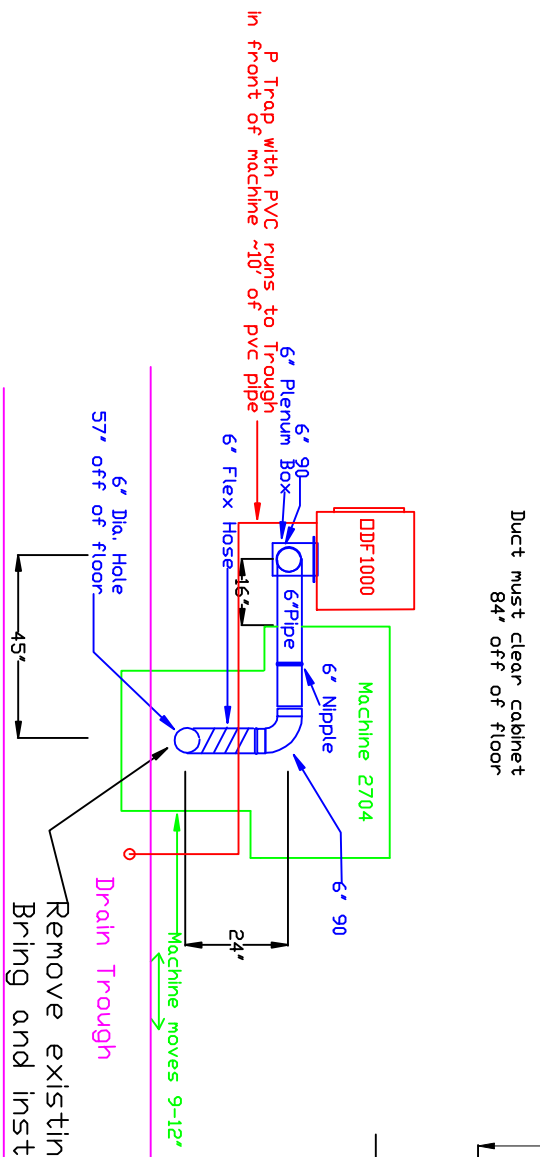

Duct must clear cabinet
84" off of floor

Side View

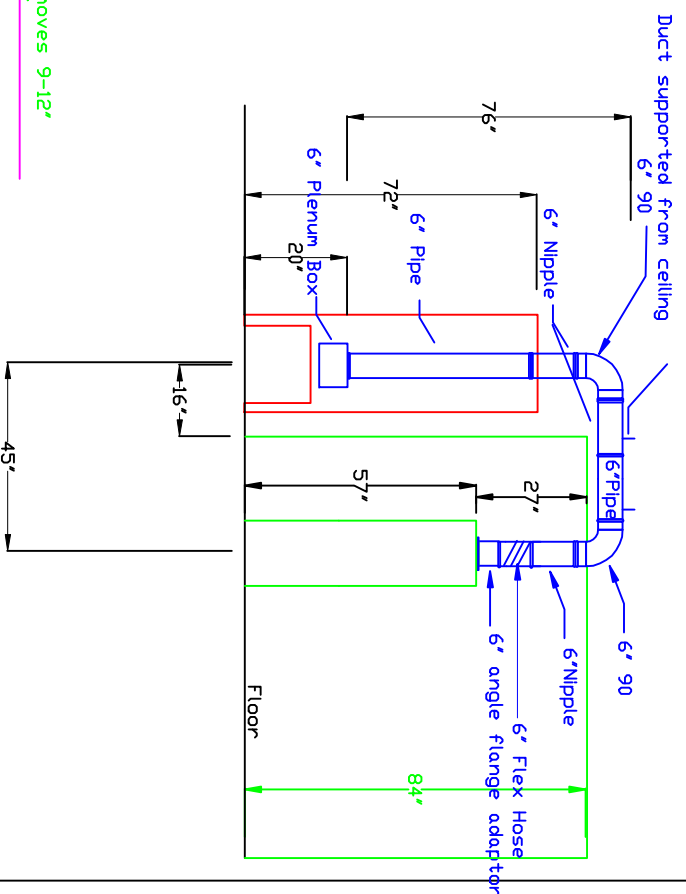

NOTE

Remove existing machine connection
Bring and install 12"x10" plate with 6" hole