


## Ductwork Layout for Line 3

Plan View

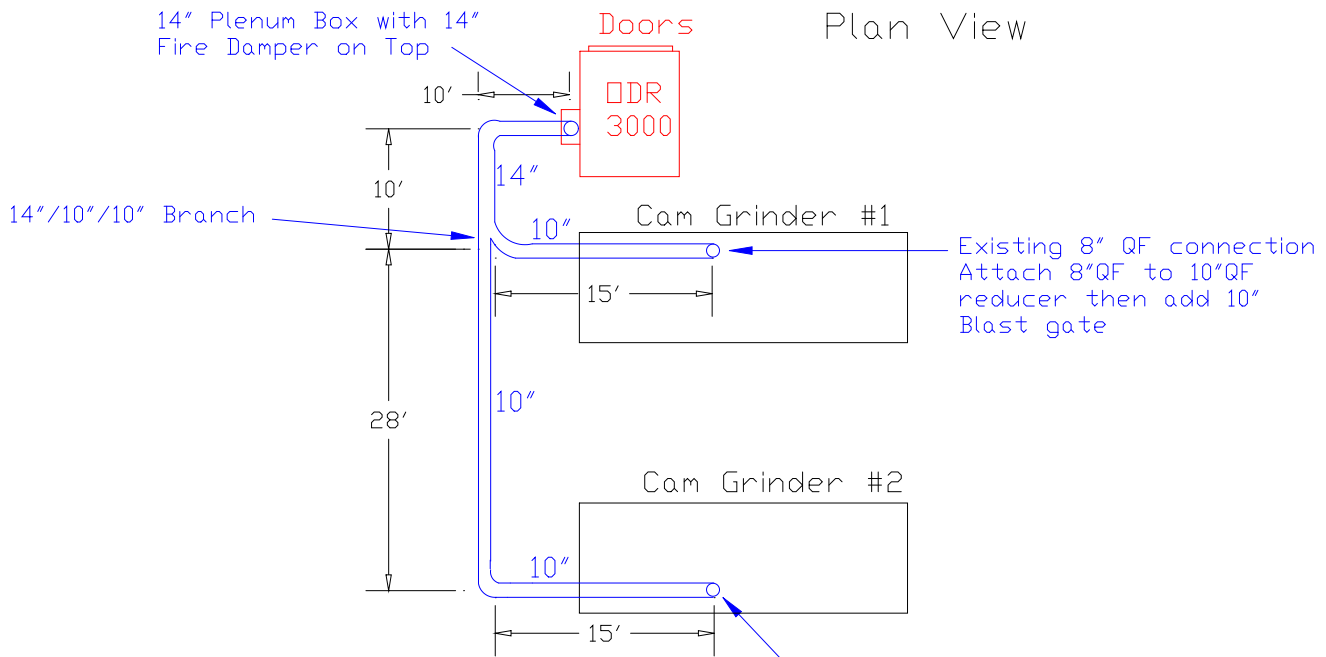

**Notes:**

- 1) Bottom of ductwork is 14' off of floor
- 2) Use gripple hangers to hang the ductwork from the ceiling
- 3) Install a blast gate at each drop to allow for air flow adjustment
- 4) Install a 14" fire damper on top of the Plenum Box
- 5) Drain line will be ran by Systrand

Existing 8" QF connection  
Attach 8"QF to 10"QF  
reducer then add 10"  
Blast gate

Industrial Air Quality		<b>IAQ</b>
102 AG DRIVE Youngsville, NC 27596		
P# 919-562-7181 F# 919-562-7182		
Project: Systrand Presta		
Drawing: Duct Layout Line 3		
Date: 9/13/07	Drawn by: DDJ	
Revision Date:		