


# Curtis Screw Project #3 Elevation View

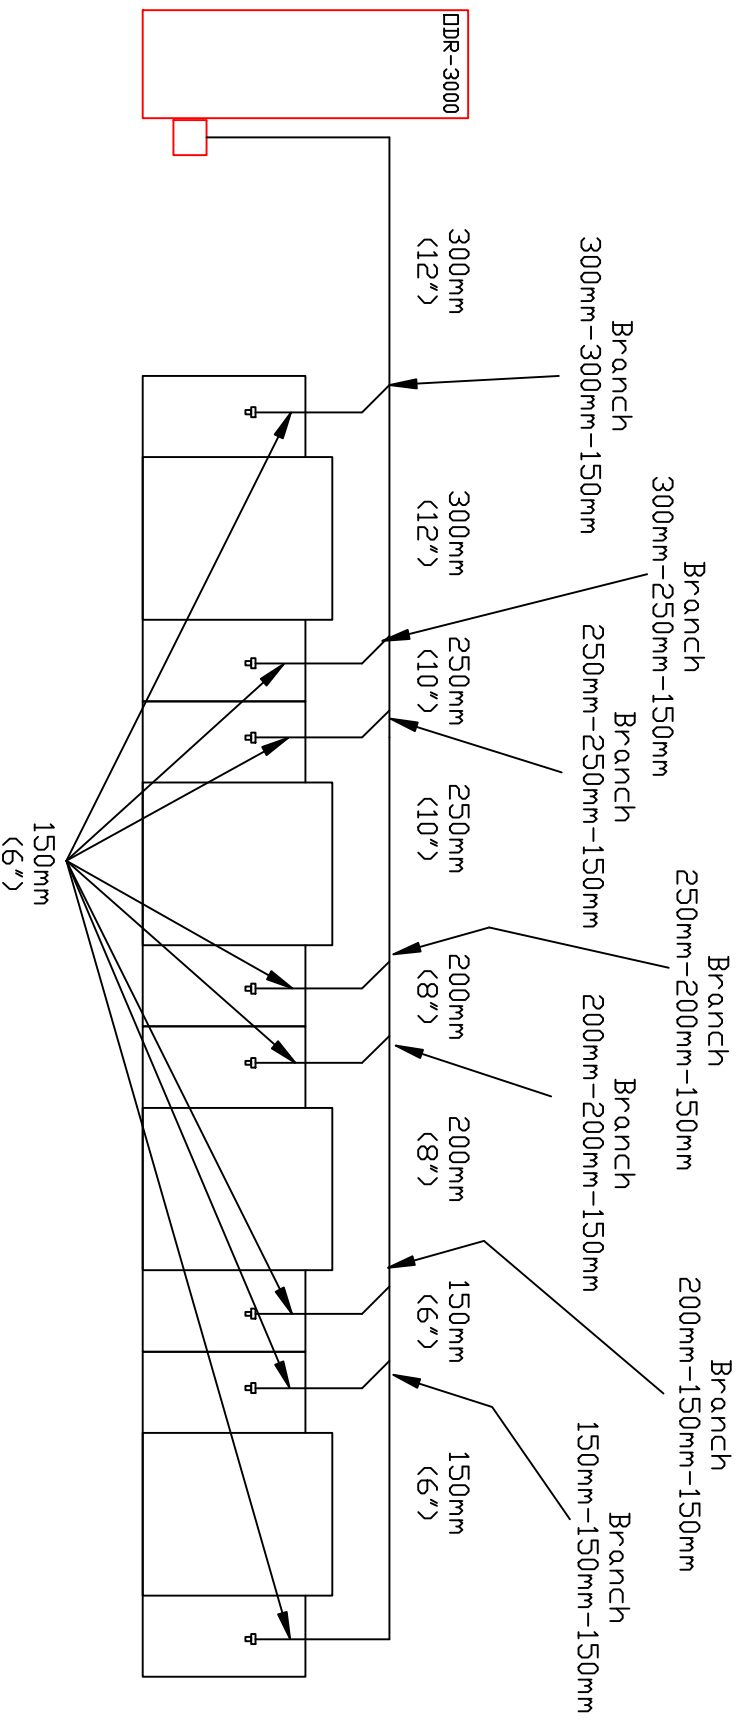

**Notes:**

- 1) Set DDR-3000 on Stand
- 2) All drops will come off the bottem of the header.
- 3) Connection to Machine using 140mm weld end and 140mm-150mm cone.
- 4) Install 1 1/4" P-trap bucket drain on Absolent

|   |               |
|---|---------------|
| Avani Environmental<br>95 Cypress Drive<br>Youngsville, NC 27596<br>PH 919-570-2862 F# 919-570-2863 | <b>Avani</b>  |
| Project: Curtis Screw   |               |
| Drawing: Project #3 Elevation   |               |
| Date: 2/1/11  | Drawn by: WWB |
| Sheet No: 1   |               |