


Plan View of Ductwork Layout  
 Balance Drawing  
 Block Line #6 - Coolant System #3

Note:  
 After installing the reducer on the machine, then attach a 12" 30 deg elbow. This will point the ductwork vertical. Then attach a 12" 90 deg elbow to the Absolnt.

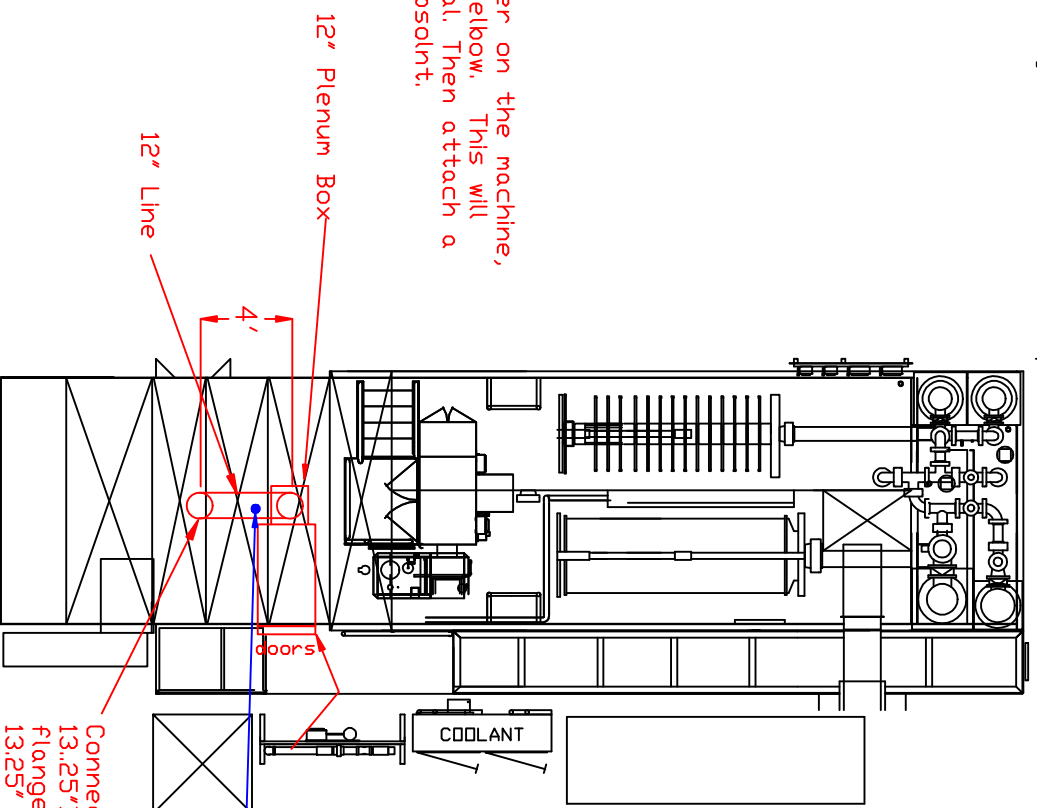

DDF-4000TF  
 SN: 20071337  
 TP1  
 Connection:  
 13.25"ID Angle Flange  
 flange is 3.5". Attach reducer  
 13.25" flanged to 12" rolled edge.

- Notes:
- A) Each drop will have a Butterfly damper for air-flow adjustment.
  - B) Each drop will have a Bleed in valve to allow for balancing.
  - C) DDF 4000TF has SHP 460volt 3Phase motor. Full load amps are 8.33amps.
  - D) Drain line: By Honda.