



- Take out **Adjustable Feet.**
- Fasten Adjustable Feet to BSL-1~2, BSM-1~4 and BSR-1~2.

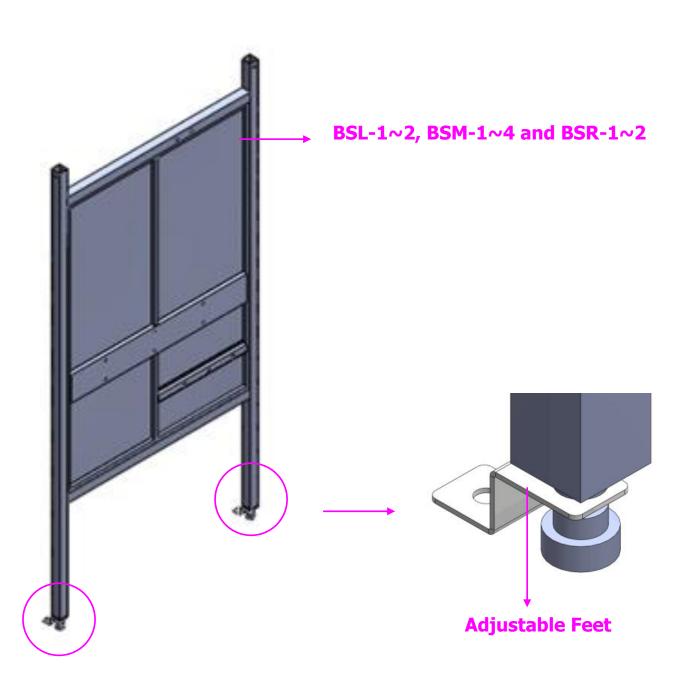

- Take out BSL-1 and BS-1.
- Join **BSL-1** and **BS-1** together with:


Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3"	1/4"— 3/8"— 1/2"— 3/4"— 1"— 1"— 1"— 1-1/2"— 2-1/4"— 2-1/2"— 2-3/4"— 3"—	2	1YU39
Flat Washer	5/16" x OD23 x 2T	OD23	2	*1JY31

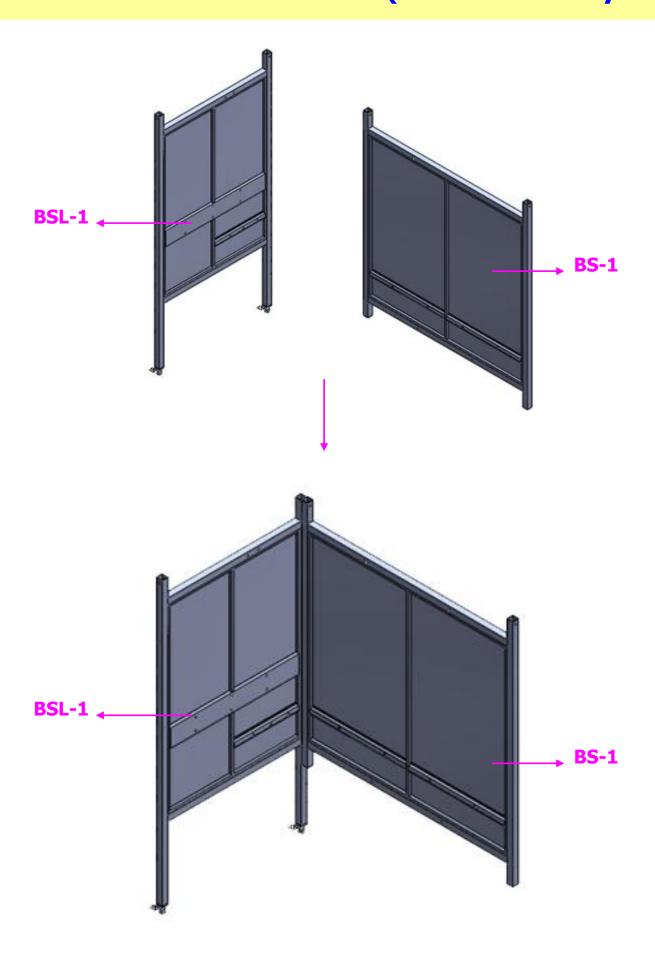

Page-5

- Take out **BSM-1**.
- Fasten **BSM-1** to **BS-1** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3"	1/4"— 3/8"— 1/2"— 3/4"— 1"— 1"— 1"— 1-1/2"— 2-1/4"— 2-1/2"— 2-3/4"— 3"—	2	1YU39
Flat Washer	5/16" x OD23 x 2T	OD23	2	*1JY31

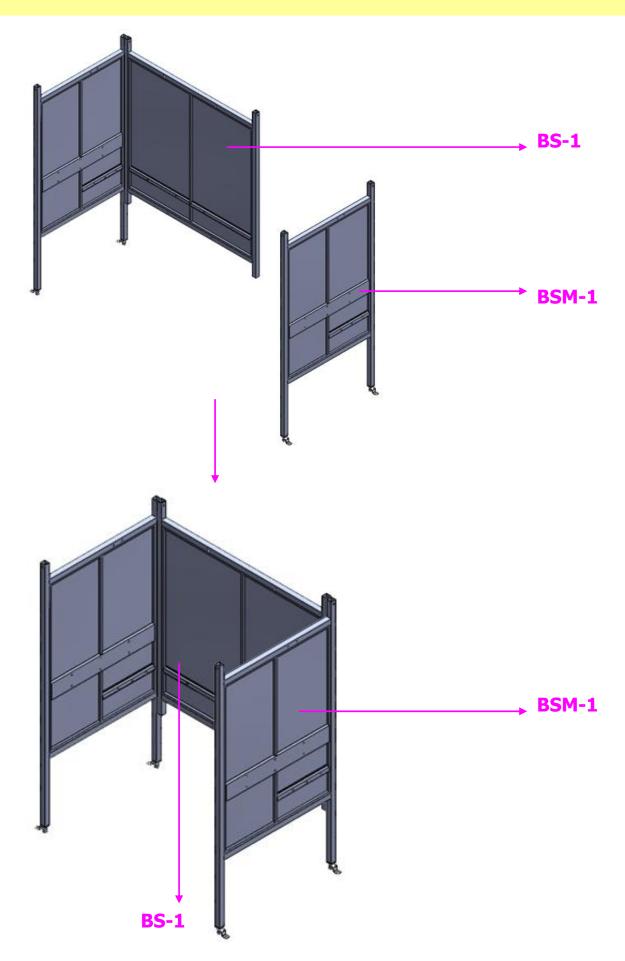


Page-7

- Take out **BSL-2**
- Fasten **BSL-2** to **BSL-1** together with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw (Partially Threaded)	3/8" x 5"	1/4" — 3/8" — 5/32" — 5/16" — 7/16" — 5/8" — 7/8" — 7/8" — 1-1/4" — 1-1/2" — 2-1/4" — 2-1/2" — 2-3/4" — 3" — 3-1/4" — 3-1/2" — 3-3/4" — 4" — 4-1/4" — 4-1/2" — 4-3/4" — 5" — 5" —	3	1KA66

Flat Washer	3/8" x OD23 x 2T	OD23 3/8"	6	*1JY33
Nylon Hex Nut	3/8″	3/8" NYLON HEX NUT	3	3HDU4

^(*) Hardware item at similar spec available locally.

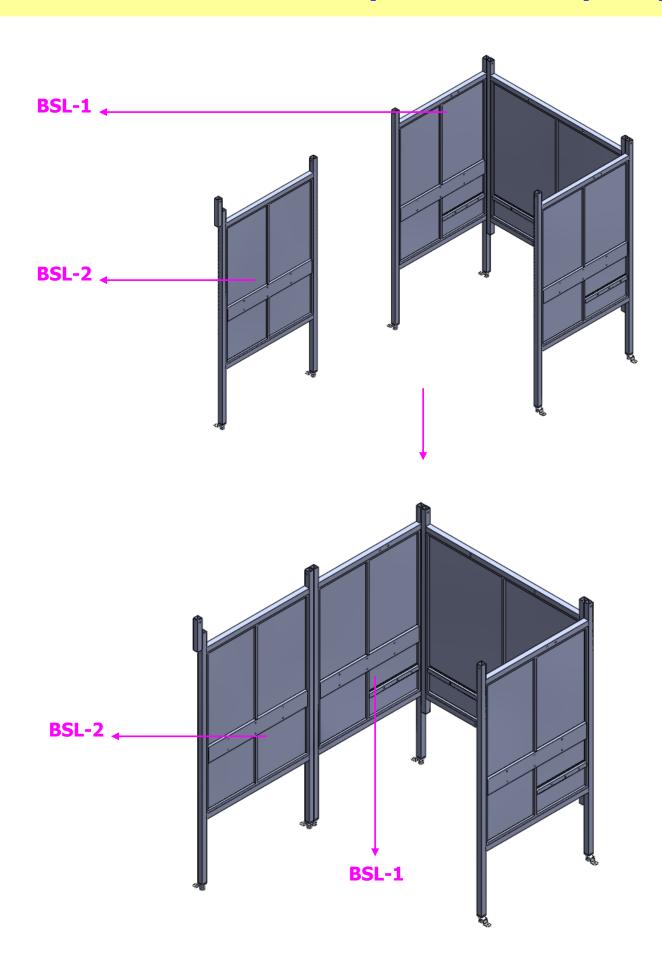


Page-10

- Take out **BSM-2**
- Fasten **BSM-2** to **BSM-1** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw (Partially Threaded)	3/8" x 5"	1/4"— 3/8"— 1/2"— 3/8"— 7/16" -5/8" -7/8" -7/8" -1-1/4" 2"— 2-1/4"— 2-1/2"— 2-3/4"— 3"— 3-1/4"— 3-1/2"— 4-1/4"— 4-1/4"— 4-1/2"— 4-3/4"— 5"—	3	1KA66

Flat Washer	3/8" x OD23 x 2T	OD23 3/8"	6	*1JY33
Nylon Hex Nut	3/8″	3/8" NYLON HEX NUT	3	3HDU4


^(*) Hardware item at similar spec available locally.

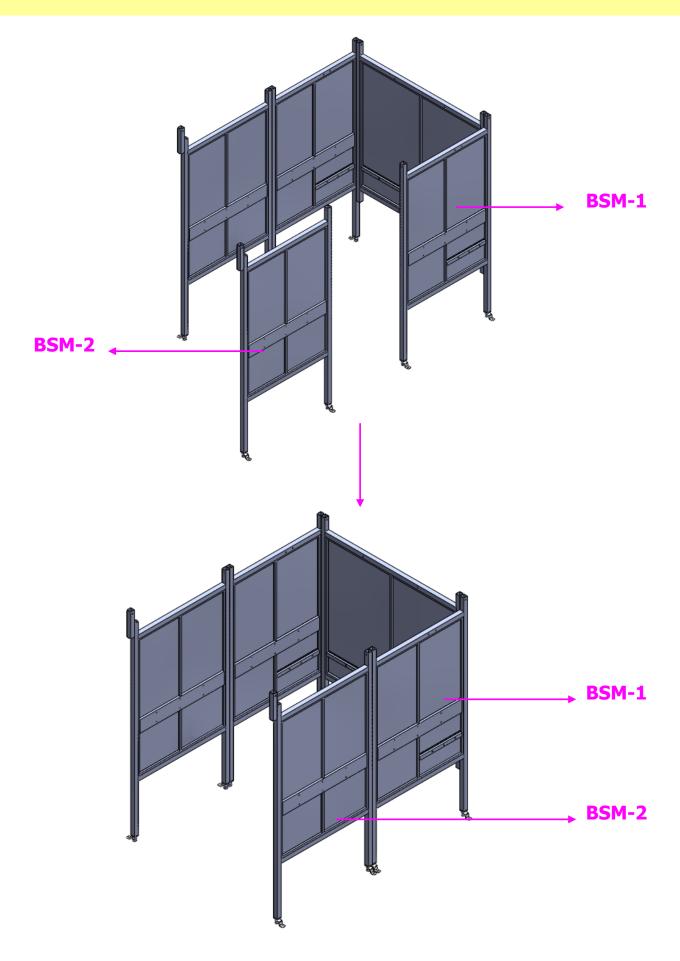


Page-13

- Take out **BS-2**.
- Fasten **BS-2** to **BSM-1** with:


Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3"	1/4"— 3/8"— 1/2"— 3/4"— 1"— 1"— 1"— 1-1/2"— 2-1/4"— 2-1/2"— 2-3/4"— 3"—	2	1YU39
Flat Washer	5/16" x OD23 x 2T	OD23	2	*1JY31

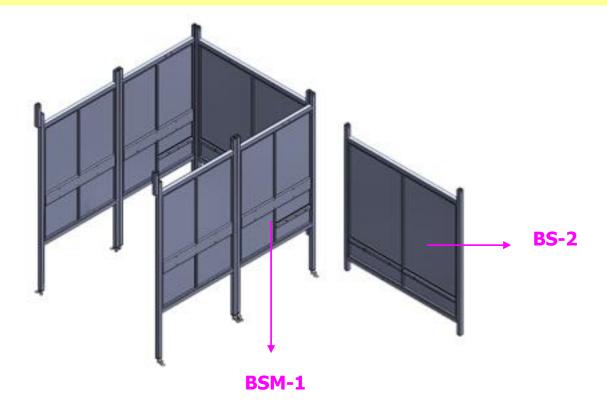

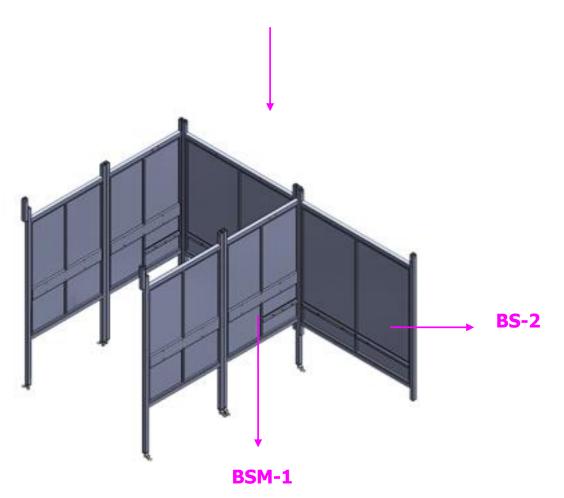

- Take out **BSM-3**.
- Fasten **BSM-3** to **BS-2** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3"	1/4"— 3/8"— 1/2"— 3/4"— 1"— 1"— 1-1/2"— 2-1/4"— 2-1/2"— 2-3/4"— 3"—	2	1YU39
Flat Washer	5/16" x OD23 x 2T	OD23	2	*1JY31

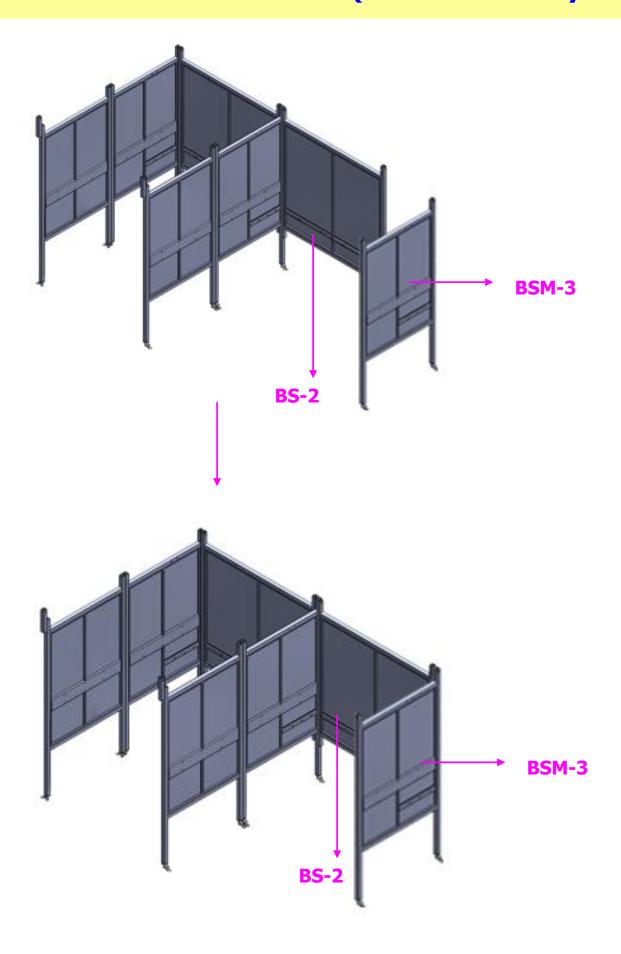


Page-17

- Take out **BSM-4**
- Fasten **BSM-4** to **BSM-3** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw (Partially Threaded)	3/8" x 5"	1/4"— 3/8"— 1/2"— 3/8"— 7/16" -5/8" -7/8" -7/8" -1-1/4" 2"— 2-1/4"— 2-1/2"— 2-3/4"— 3"— 3-1/4"— 3-1/2"— 4-1/4"— 4-1/4"— 4-1/2"— 4-3/4"— 5"—	3	1KA66


Flat Washer	3/8" x OD23 x 2T	OD23 3/8"	6	*1JY33
Nylon Hex Nut	3/8″	3/8" NYLON HEX NUT	3	3HDU4

^(*) Hardware item at similar spec available locally.

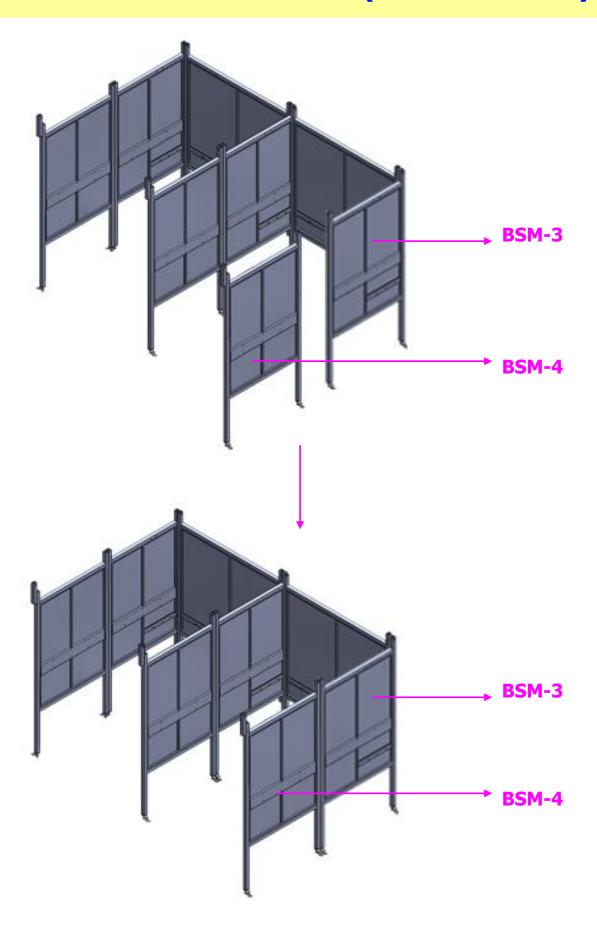


- Take out **BS-3**.
- Fasten **BS-3** to **BSM-3** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3"	1/4"— 3/8"— 1/2"— 3/4"— 1"— 1"— 1-1/2"— 2-1/4"— 2-1/2"— 2-3/4"— 3"—	2	1YU39
Flat Washer	5/16" x OD23 x 2T	OD23	2	*1JY31

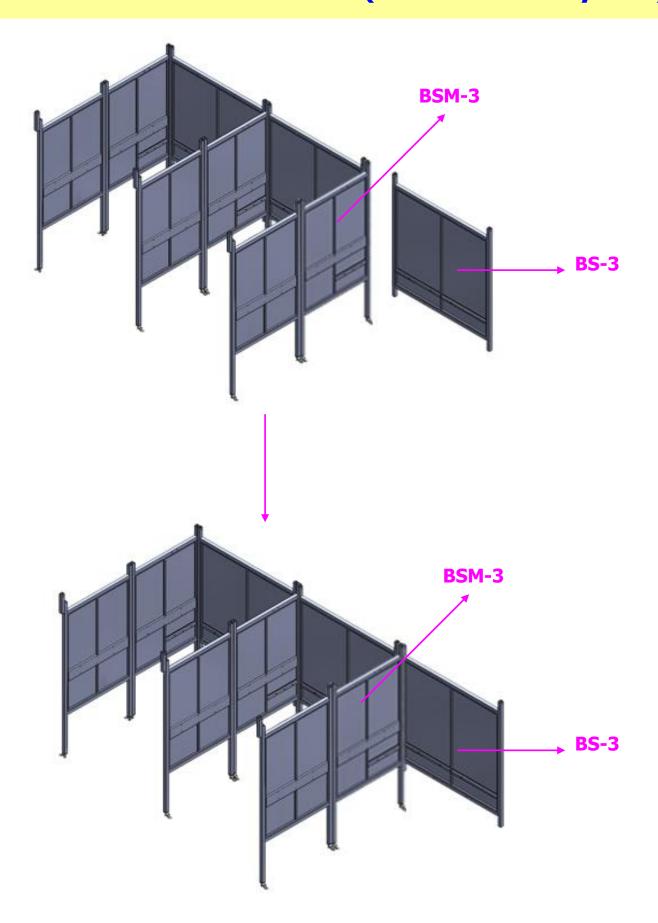

- Take out **BSR-1**.
- Fasten **BSR-1** to **BS-3** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3"	1/4" — 5/32" 3/8" — 5/16" 1/2" — 5/8" 3/4" — 7/8" 1" — 1-1/4" 1-1/2" — 1-3/4" 2" — 2-1/4" — 2-3/4" — 3" — 3" — 3"	2	1YU39
Flat Washer	5/16" x OD23 x 2T	OD23	2	*1JY31

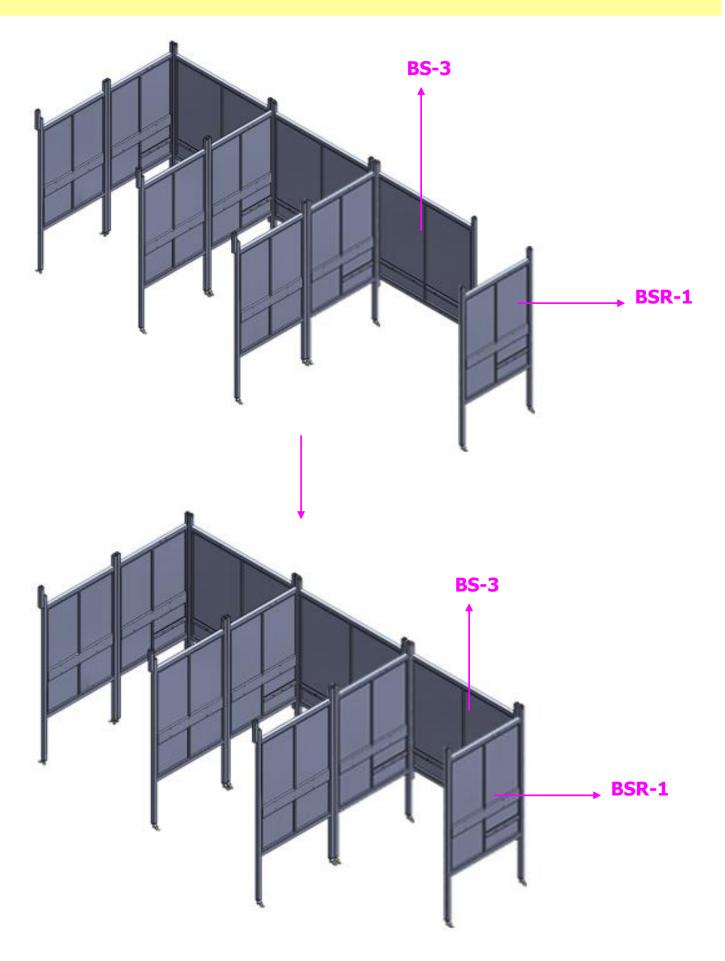


Page-24

- Take out **BSR-2.**
- Fasten BSR-2 to BSR-1 with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw (Partially Threaded)	3/8" x 5"	1/4" — 5/32" — 5/16" — 7/16" — 7/16" — 7/8" — 7/8" — 1-1/4" — 1-1/2" — 2-1/4" — 2-1/2" — 2-3/4" — 3" — 3-1/4" — 3-1/2" — 4-1/4" — 4-1/4" — 4-1/4" — 4-1/2" — 4-3/4" — 5" — 5" —	3	1KA66

Flat Washer	3/8" x OD23 x 2T	OD23 3/8"	6	*1JY33
Nylon Hex Nut	3/8″	3/8" NYLON HEX NUT	3	3HDU4


^(*) Hardware item at similar spec available locally.

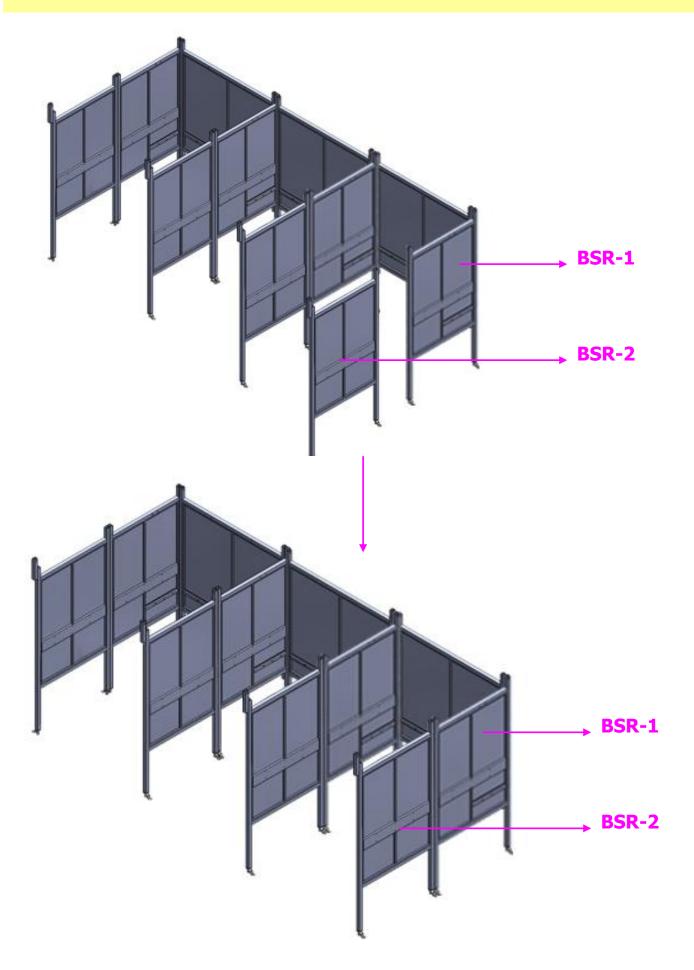

Page-27

- Take out **TB, TLG** and **TRG**.
- Fasten **TLG** and **TRG** to **TB** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3/4"	1/4" — 5/32" 1/4" — 5/16" 1/2" — 7/16" 3/4" — 5/8"	18	1YU33
Flat Washer	5/16" x OD18 x 2T	OD18	18	*1JY31

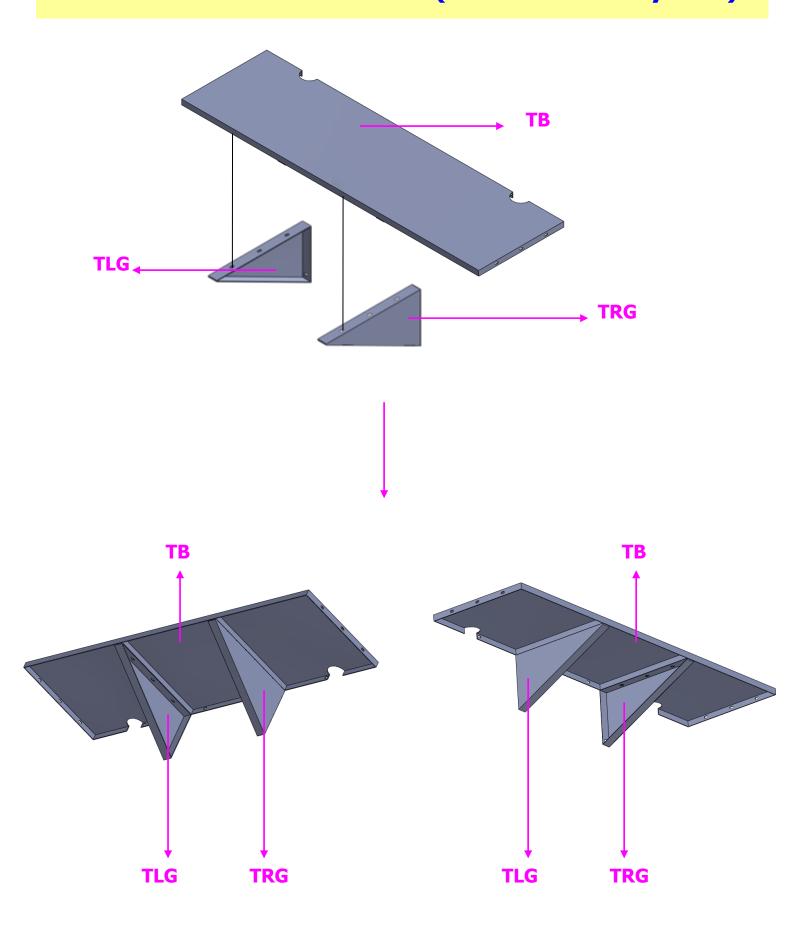


• Fasten **TB** to **BSL-1**, **BSM-1**, **BSM-3** and **BSR-1** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3/4"	1/4" — 5/32" 1/4" — 5/16" 1/2" — 7/16" 3/4" — 5/8"	18	1YU33
Flat Washer	5/16" x OD18 x 2T	OD18	18	*1JY31

• Fasten **TLG** and **TRG** to **BS-1~BS-3** with:


Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3/4"	1/4"————————————————————————————————————	18	1YU33
Flat Washer	5/16" x OD18 x 2T	OD18	18	*1JY31

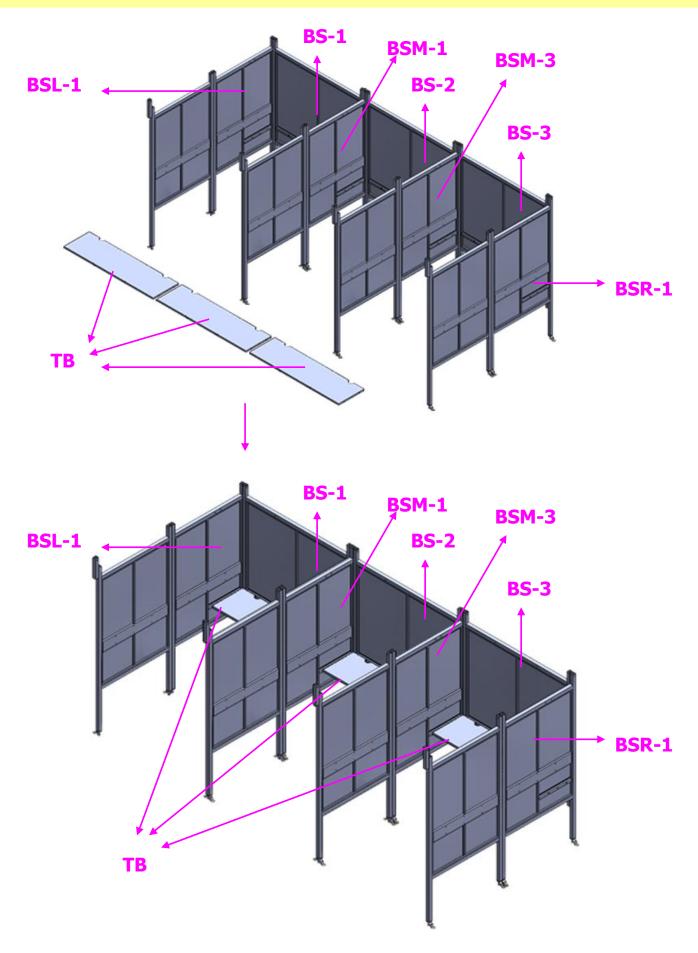

Page-32

- Take out **JH**.
- Fasten JH to BSL-1~2, BSM-1~4 and BSR-1~2 with:


Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3/4"	1/4" — 5/32" 3/8" — 5/16" 1/2" — 7/16" 3/4" — 5/8"	24	1YU33
Flat Washer	5/16" x OD23 x 2T	OD23	24	*1JY31

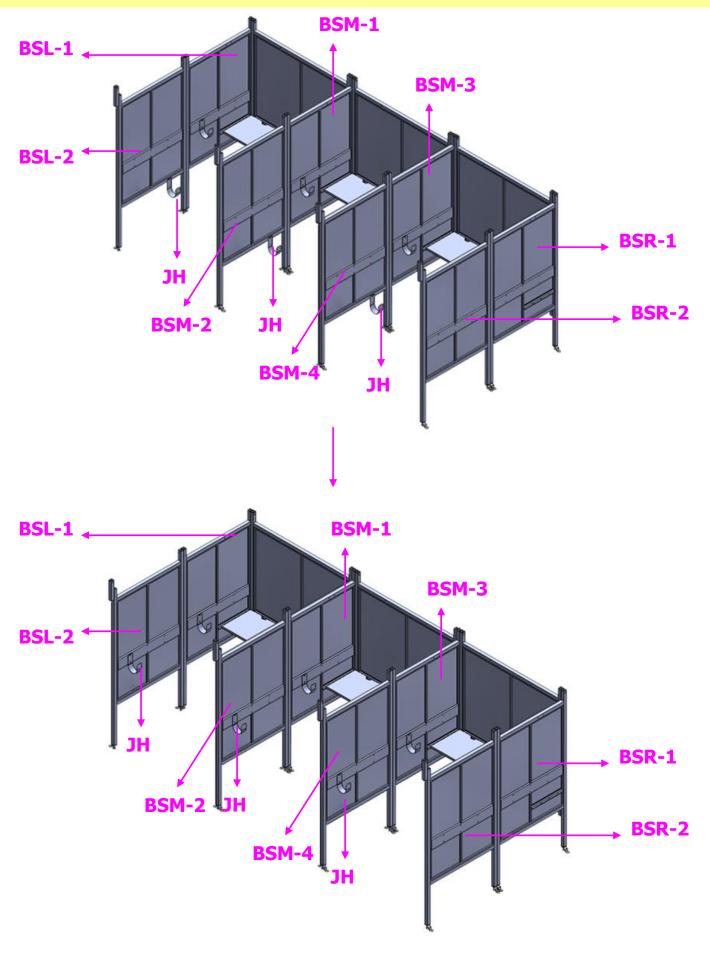

Page-34


- Take out Working Light base.
- Fasten Working Light base to BS-1~3 with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	1/4" x 3/4"	1/4"————————————————————————————————————	12	1UY24
Flat Washer	1/4" x OD19 x 2T	OD19	12	*1JY29

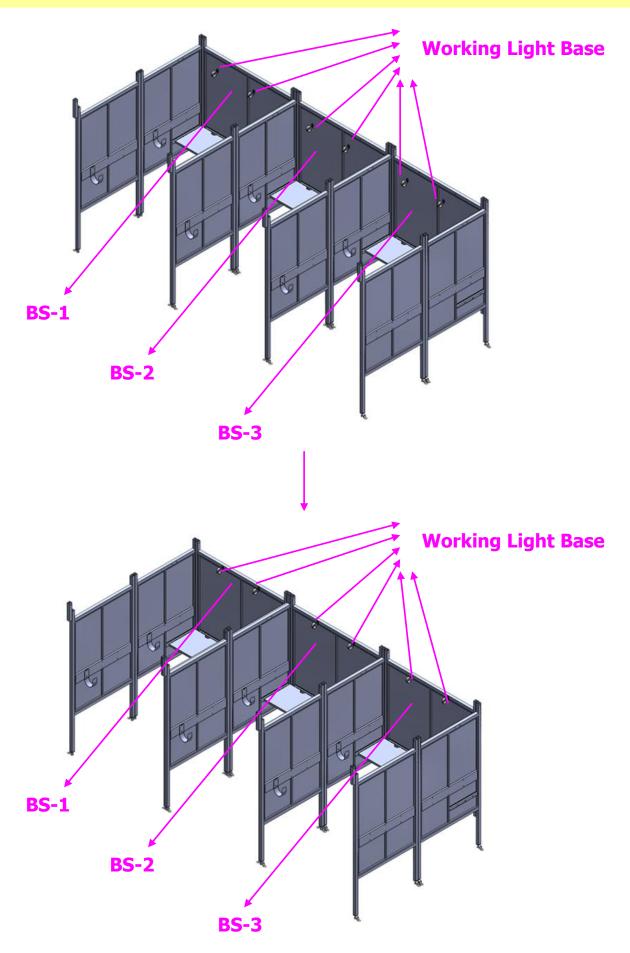

Page-36


- Take out **Working Light**.
- Assemble the **Working Light** to the base.

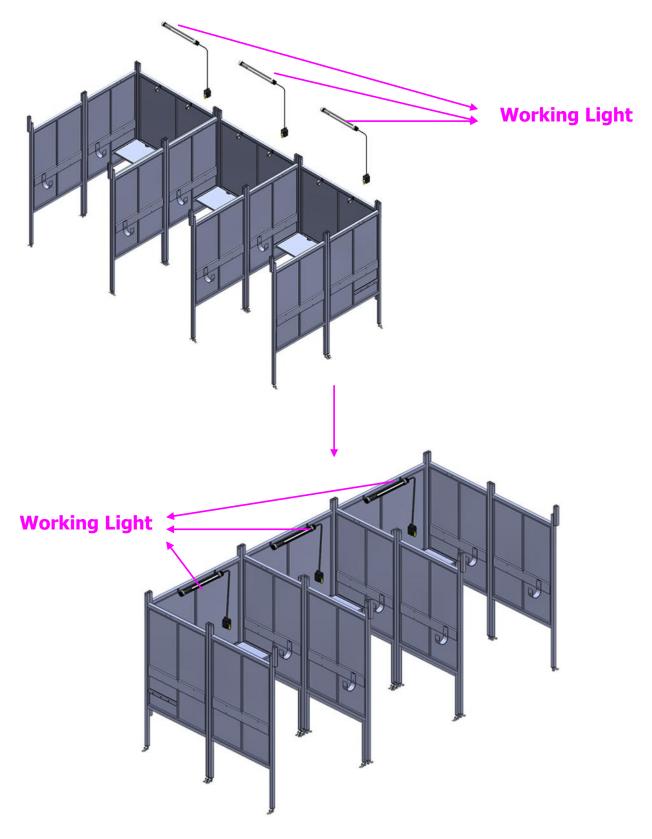

Page-37


- Take out A.
- Fasten A to BSL-2, BSM-2, BSM-4 and BSR-2 with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3/4"	1/4" — 5/32" 3/8" — 5/16" 1/2" — 7/16" 3/4" — 5/8"	6	1YU33
Flat Washer	5/16" x OD23 x 2T	OD23	6	*1JY31

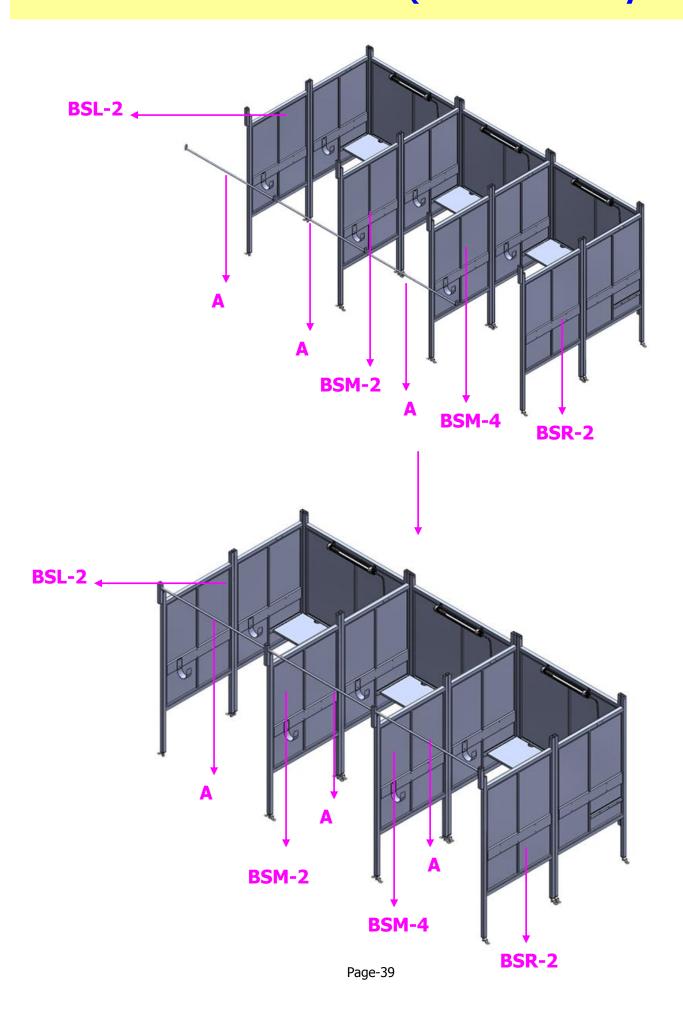

- Take out **HD.**
- Fasten **HD** to **BSM-1**, **BMS-3** and **BSR-1** with:

Part name	Description	Photos	Q'ty	Grainger Model #
Hex Screw	5/16" x 3/4"	1/4" — 5/32" 3/8" — 5/16" 1/2" — 7/16" 3/4" — 5/8"	6	1YU33
Flat Washer	5/16" x OD23 x 2T	OD23	6	*1JY31

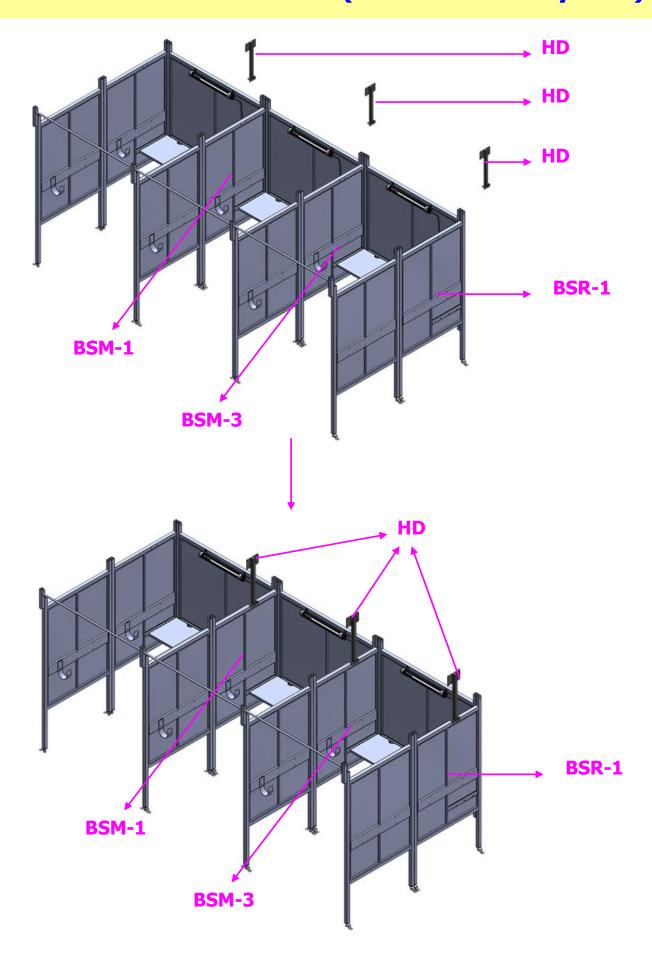



Page-41

• Fasten **Sleeve Anchor** for legs to field bolted if needed.

Assembly completed.

Part name	Description	Photos	Q'ty	Grainger Model #
Sleeve Anchor	3/8" x 3"	1/4" 3/8" 1/2" 3/8" 1/2" 3/4" - 7/8" - 7/8" - 1-1/4" 1-1/2" - 2-1/4" 2-1/2" 2-3/4" 3" - 3"	24	3A475

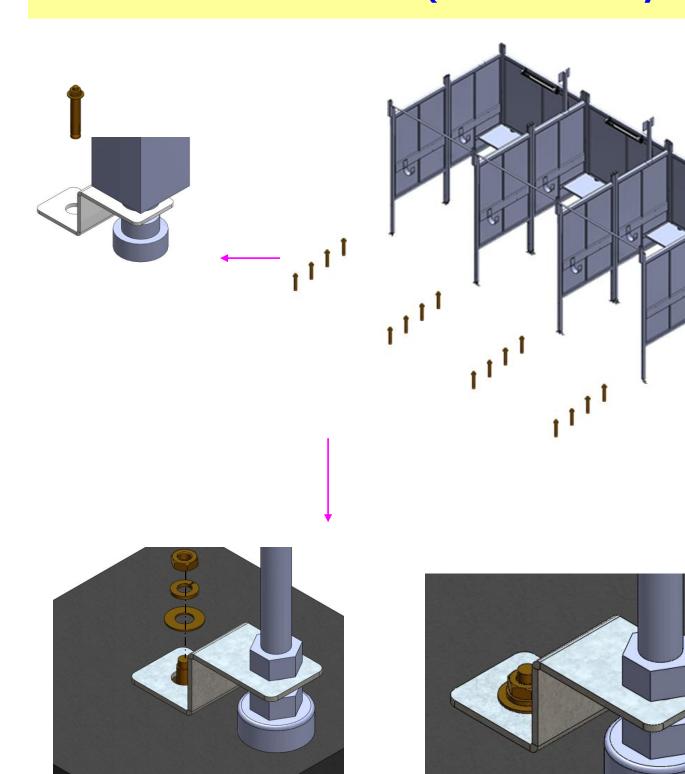

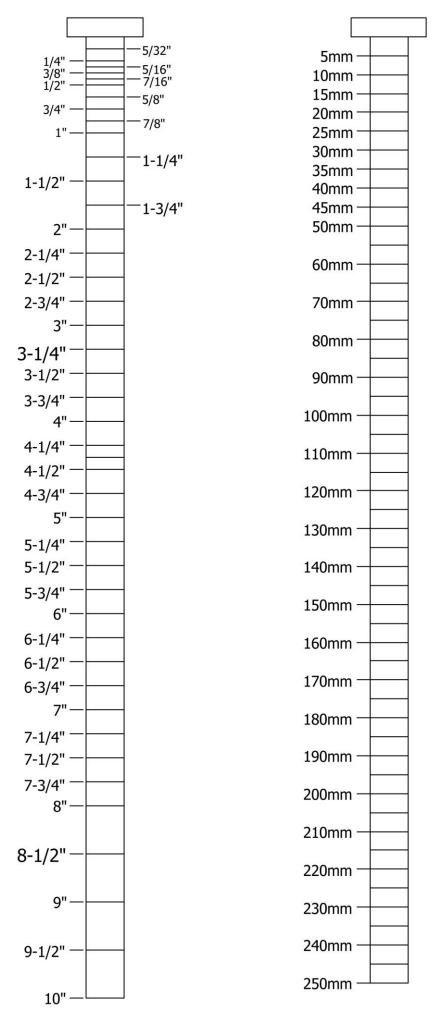


Page-44

Flat Washer: 1/4"











Flat Washer: 5/16"

OD18






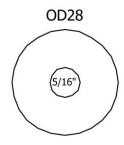


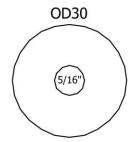



Flat Washer: 3/8"

OD23






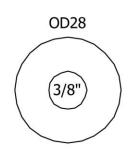


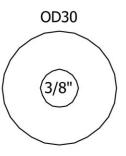


Flat Washer: 1/2"

OD25




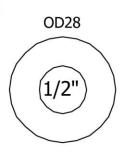

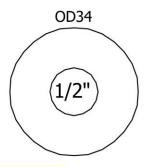

Flat Washer: 7/16"


OD25




Flat Washer: 5/8"

OD38

(5/8")

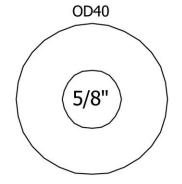

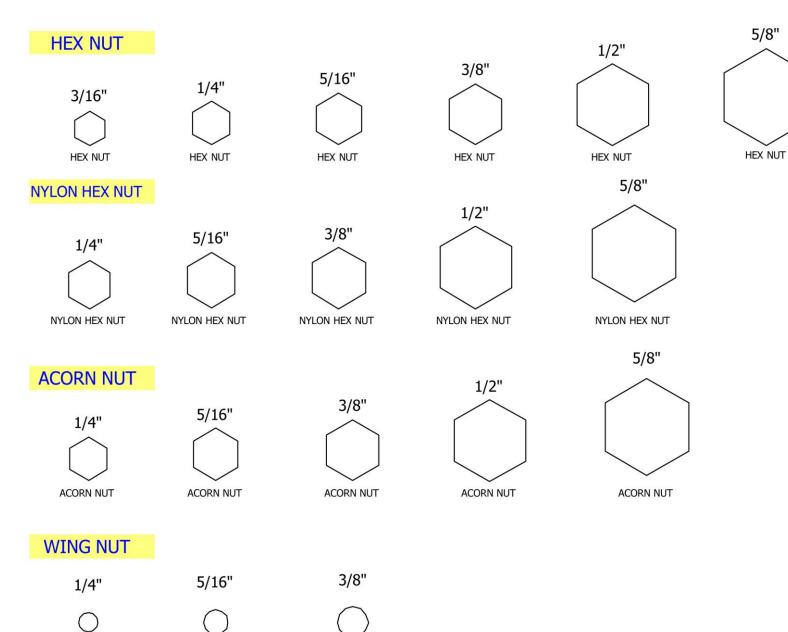

WING NUT

WING NUT

WING NUT

Rubber Washer





Split Lock Washer

1/4"



5/16"







