Ductwork Layout for Lab area

Plan View

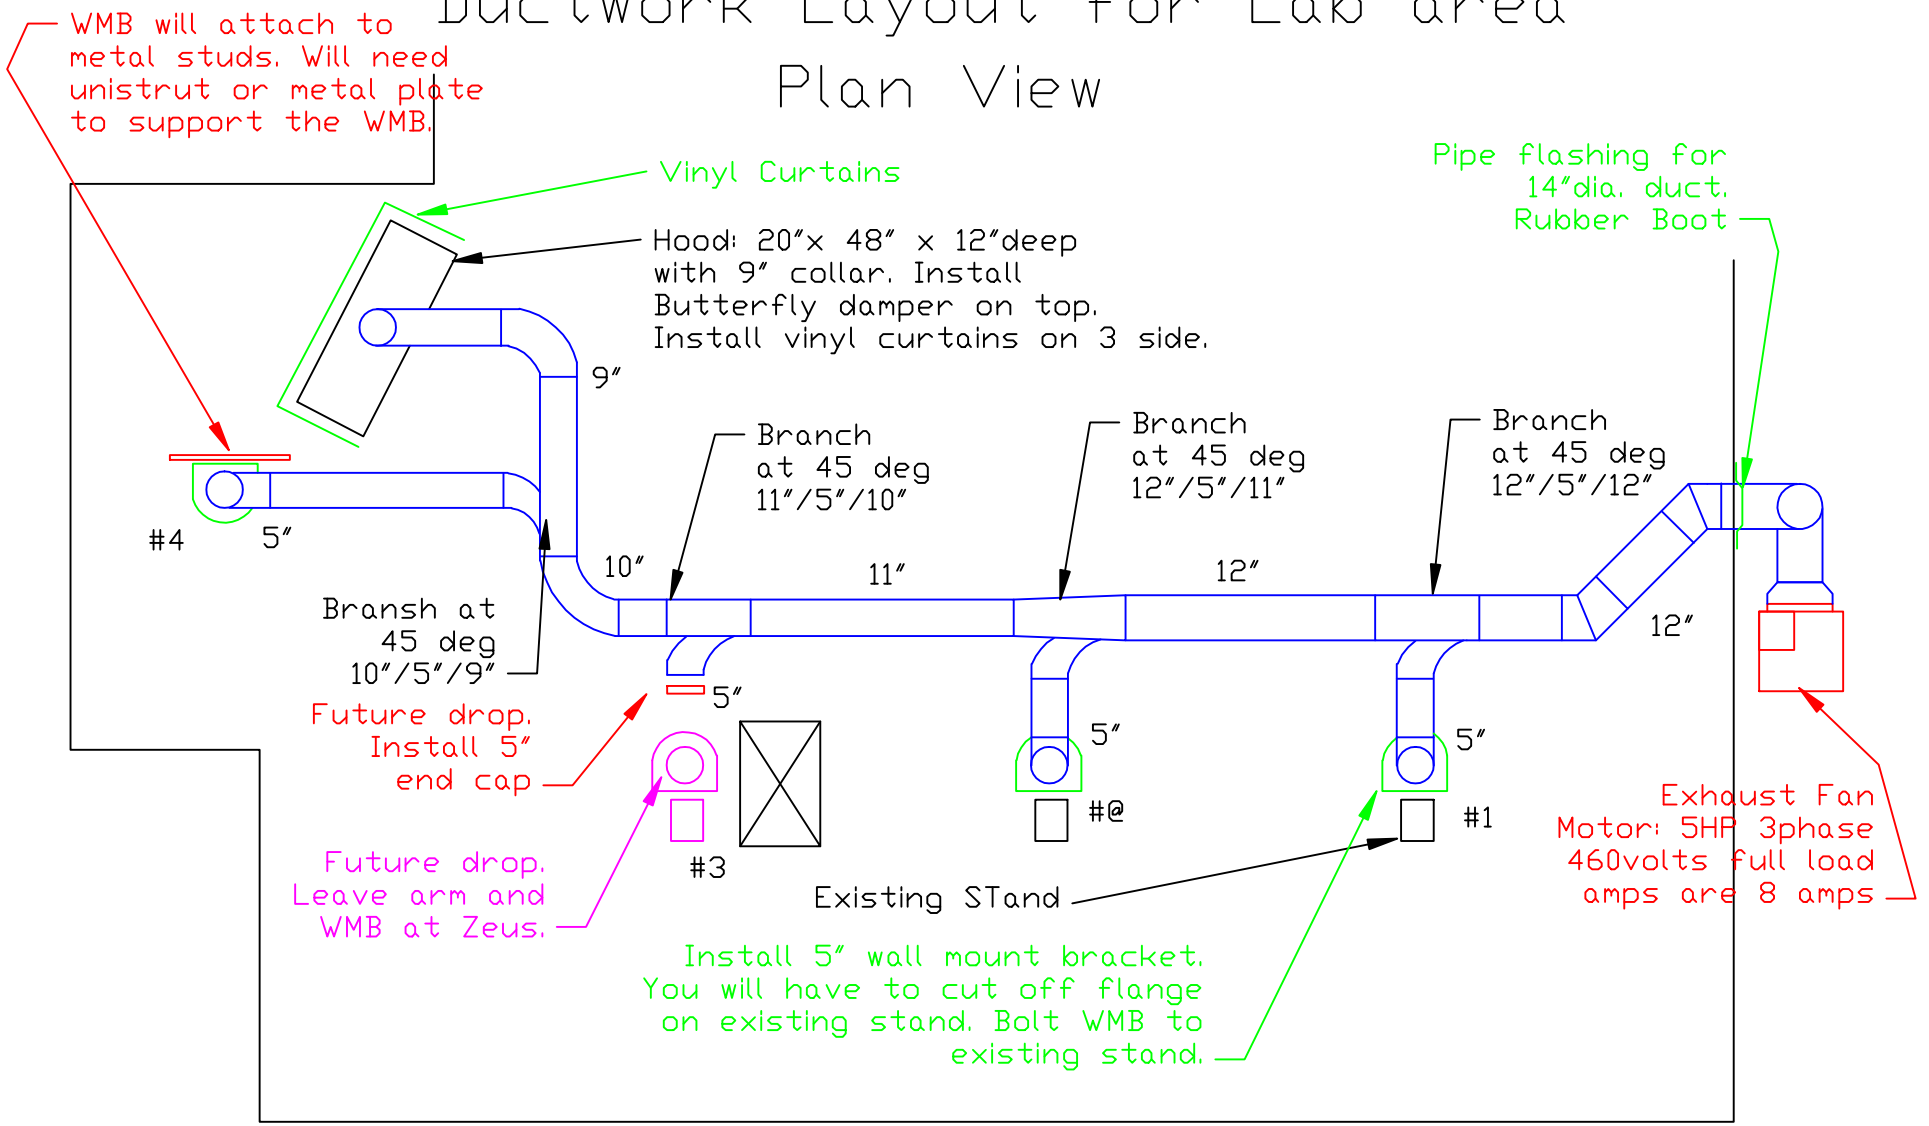

Note:
A) Run ductwork above drop ceiling. Ceiling height is 10 feet.
B) Install Rubber boot over 12" duct to flash to wall. Make sure to silicone it to the wall.
C) Install Vinyl curtains on three sides of hood.

Avani Environmental
95 Cypress Drive
Youngsville, NC 27596
P# 919-570-2862 F# 919-570-2863

Avani

Project: Zeus	
Drawing: Ductwork layout	
Date: 11/14/11	Drawn by: RAV
Sheet No:	