Ductwork Layout for exhaust fan

Plan View

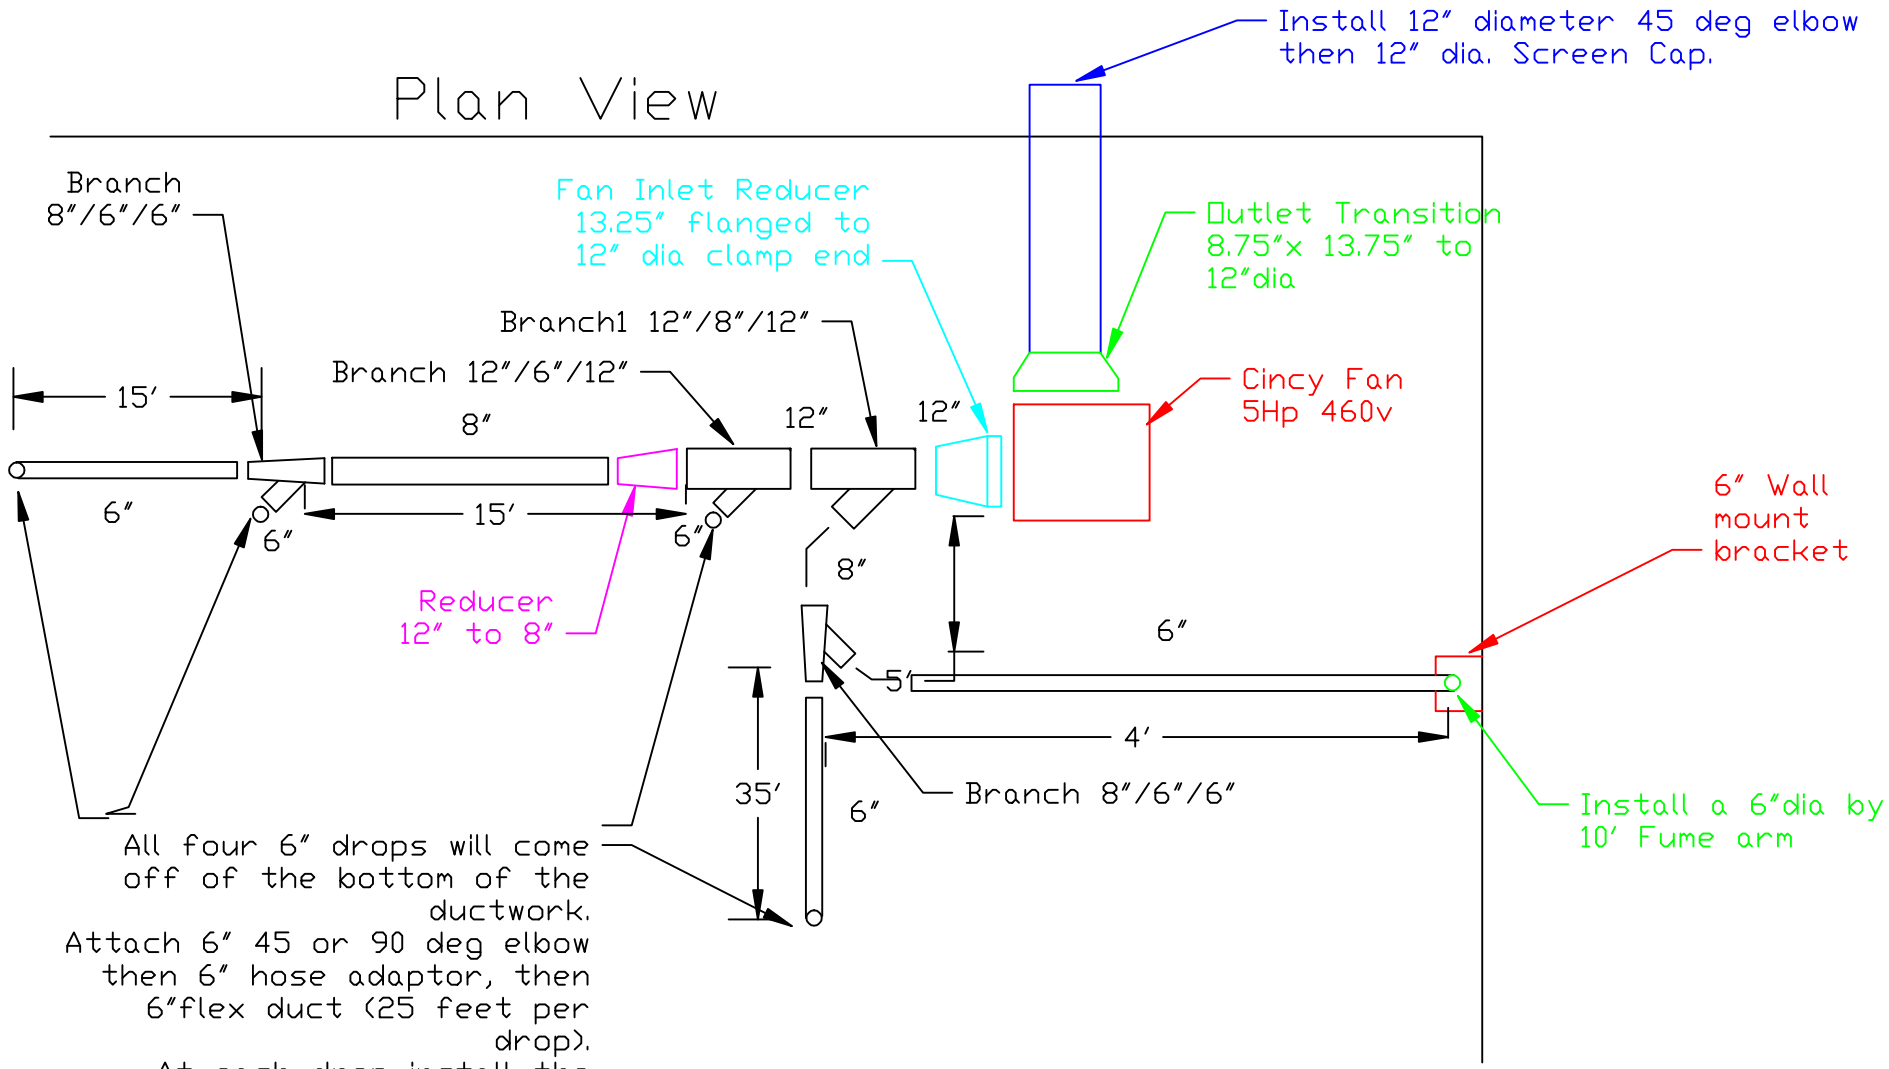

All four 6″ drops will come off of the bottom of the ductwork.
Attach 6″ 45 or 90 deg elbow then 6″ hose adaptor, then 6″flex duct (25 feet per drop).
At each drop install the Eurovac hose drop model EV-HDH60025 and at the end of each drop install the Eurovac model# SYS-VEH-S hose saddle and spring return

Avani Environmental
95 Cypress Drive
Youngsville, NC 27596
P# 919-570-2862 F# 919-570-2863

Avani

Project: Miles City Shop	
Drawing: Ductwork layout	
Date: 5/27/11	Drawn by: RAV
Sheet No:	