Notes:
A) Bottom of trunkline about 8' to 10' off of floor
B) Attach on top of booth outlet a rect to round transition: 20"x 6" to 12" round.

APX WELD

System #1

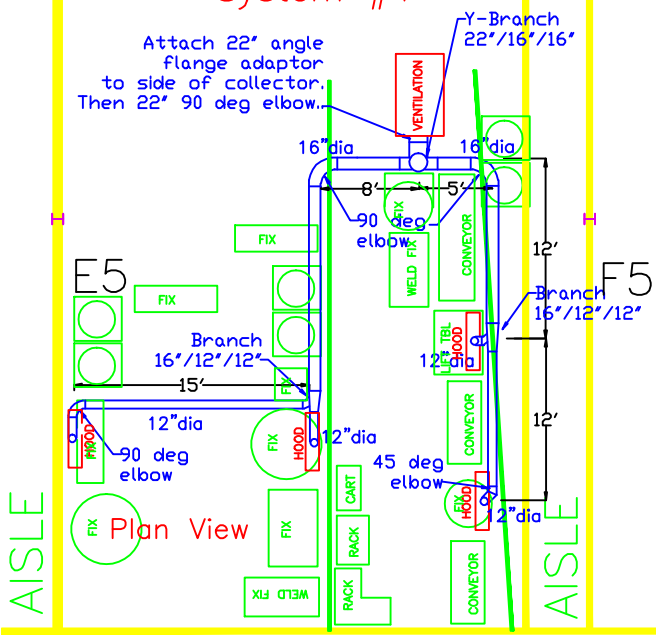

Notes:
A) Bottom of trunkline about 8' to 10' off of floor
B) Attach on top of booth outlet a rect to round transition: 20"x 6" to 12" round.

RC WELD

System #2

Plan View

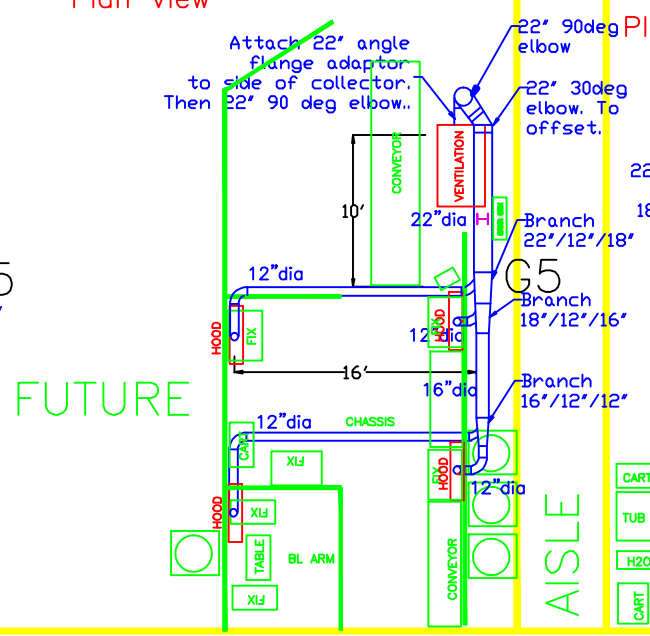

Notes:
A) Bottom of trunkline about 8' to 10' off of floor
B) Attach on top of booth outlet a rect to round transition: 20"x 6" to 12" round.

System #3
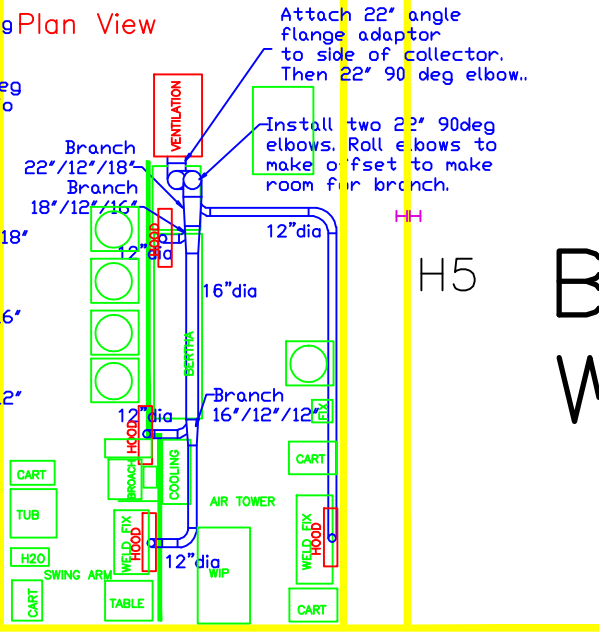
Plan View