

AVANI Large Cartridge Collector

Cleaning Procedure for the Pulse Valves



1.



2. Loosen the nut.




3. Remove the connector out of the stud.



4.

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

AVANI Large Cartridge Collector

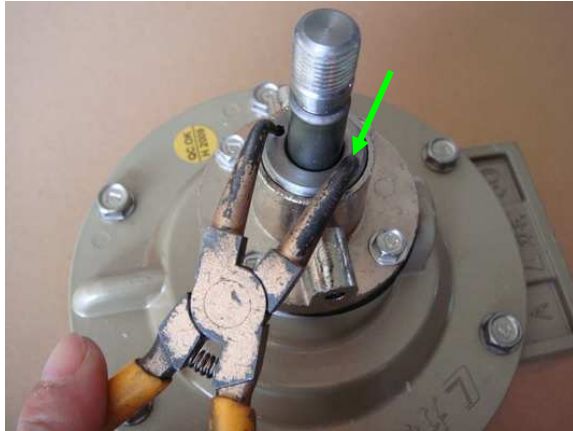

5. Release the cover.



7. Clean the metal chips inside and ensure that no chips clog here.



6. Disassemble the screw and the stud.



8. Cleanse the stud and ensure that no chips on the surface around the stud.

9. Assemble the entire set back.